



TM4

Instruction manual


***1:10 SCALE RADIO CONTROLLED ELECTRIC
POWERED 4WD RACING BUGGY***

Dimensions 尺寸:

Length 長度.....	400mm
Width 寬度.....	250mm
Height 高度.....	145mm

Transmitter Preparation

調整遙控器

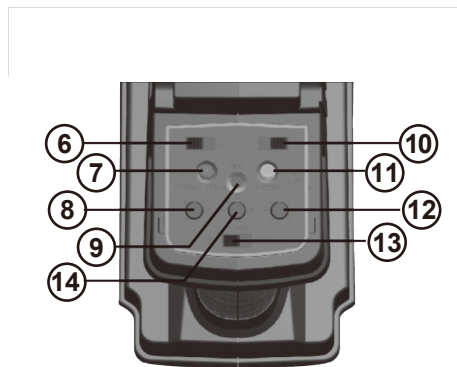

GLG20
2.4GHz

- 1 Control Panel 控制面板
- 2 Steering Wheel 轉向輪
- 3 Throttle Trigger 油門板扣
- 4 Battery Compartment 電池盒
- 5 Charging Jack 充電接口
- 6 Steering Servo Reverse 轉向正逆轉開關
- 7 Power LED 電源指示燈
- 8 Steering Trim 轉向調節
- 9 Bind Button 設定按鈕
- 10 Throttle Servo Reverse 油門正逆轉開關
- 11 Battery Voltage 電池電壓
- 12 Steering Dual Rate 轉向大小微調
- 13 Power Switch 電源開關
- 14 Throttle Trim 油門微調

Transmitter Battery Installation 遙控器電池安裝


Open battery cover at the bottom of transmitter. Install batteries. Follow the direction of batteries designated in the inside of battery box.

在遙控器的底部打開電池蓋子，安裝電池。跟隨電池的指示在電池盒裡面指定。



Transmitter Preparation

調整遙控器

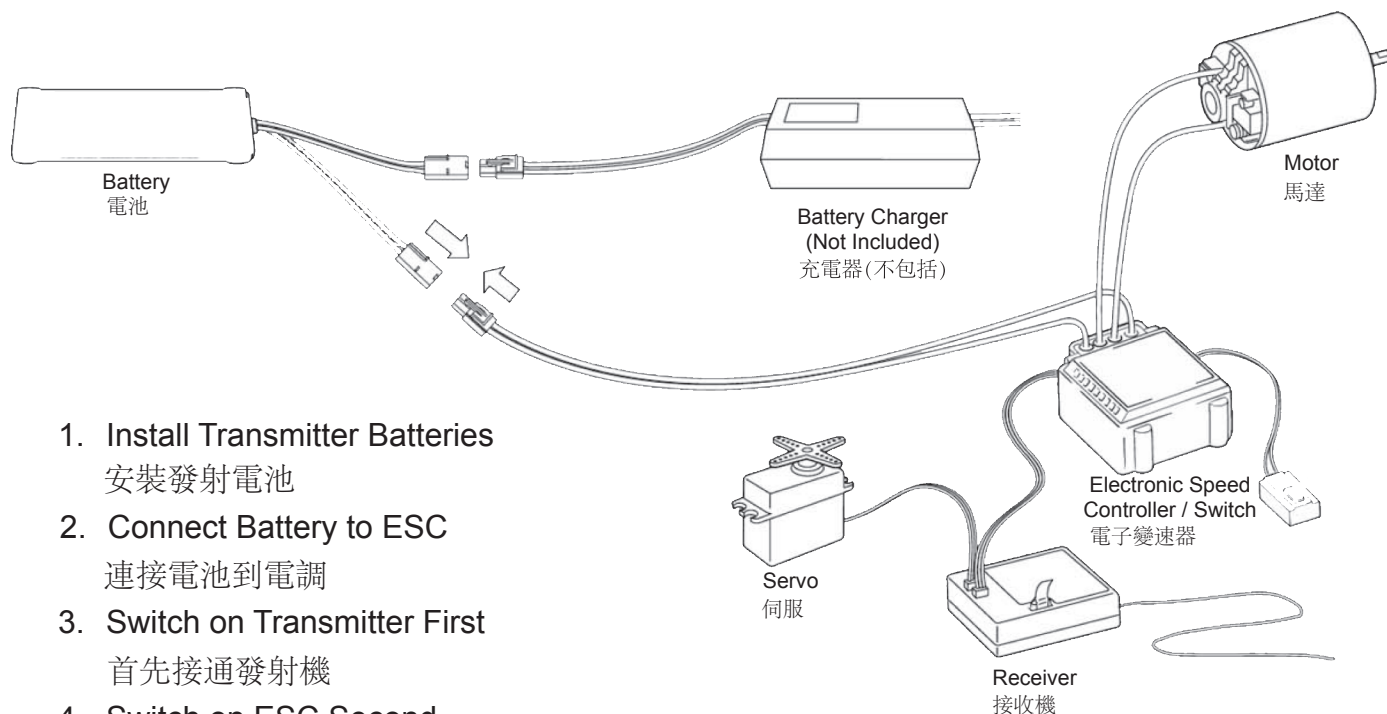


1. Install Transmitter Batteries
安裝發射電池
2. Connect Battery to ESC
連接電池到電調
3. Switch on Transmitter First
首先接通發射機
4. Switch on ESC Second
其次接通電調

Note: When done driving Turn Off the ESC and THEN Transmitter

注意: 當停止駕駛首先要關掉電調
其次再關掉發射機

Tools required 組裝需要的工具

- Needle Nose Pliers
尖嘴鉗



- Awl
錐



- Grease
潤滑油



- Screw Cement
螺絲膠水



- H162
Instant Glue
瞬間膠水




- Differential Grease
差速油



- Molybdenum Grease(Black)
鉬油(黑)



- H154
Body Reamer
車殼紋刀

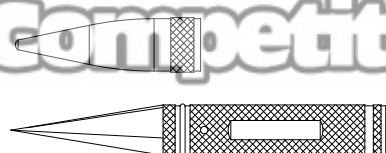


No need to pre-drill precise holes
(1mm to 15mm) can be drilled
可以對預鑽的孔準確地鑽1mm-15mm

- Wire Cutters
鋼絲鉗



- H096
ROUND CUTTER
剪刀

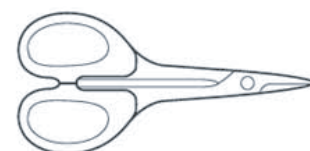

- Hex Wrench
六角扳手



- Hex Wrench
十字套筒




- Sharp Hobby knife
美工刀



For trimming bodies!
用于修剪車殼!

1 Motor Mount/Side Panel 马达座/侧板

Bag-B

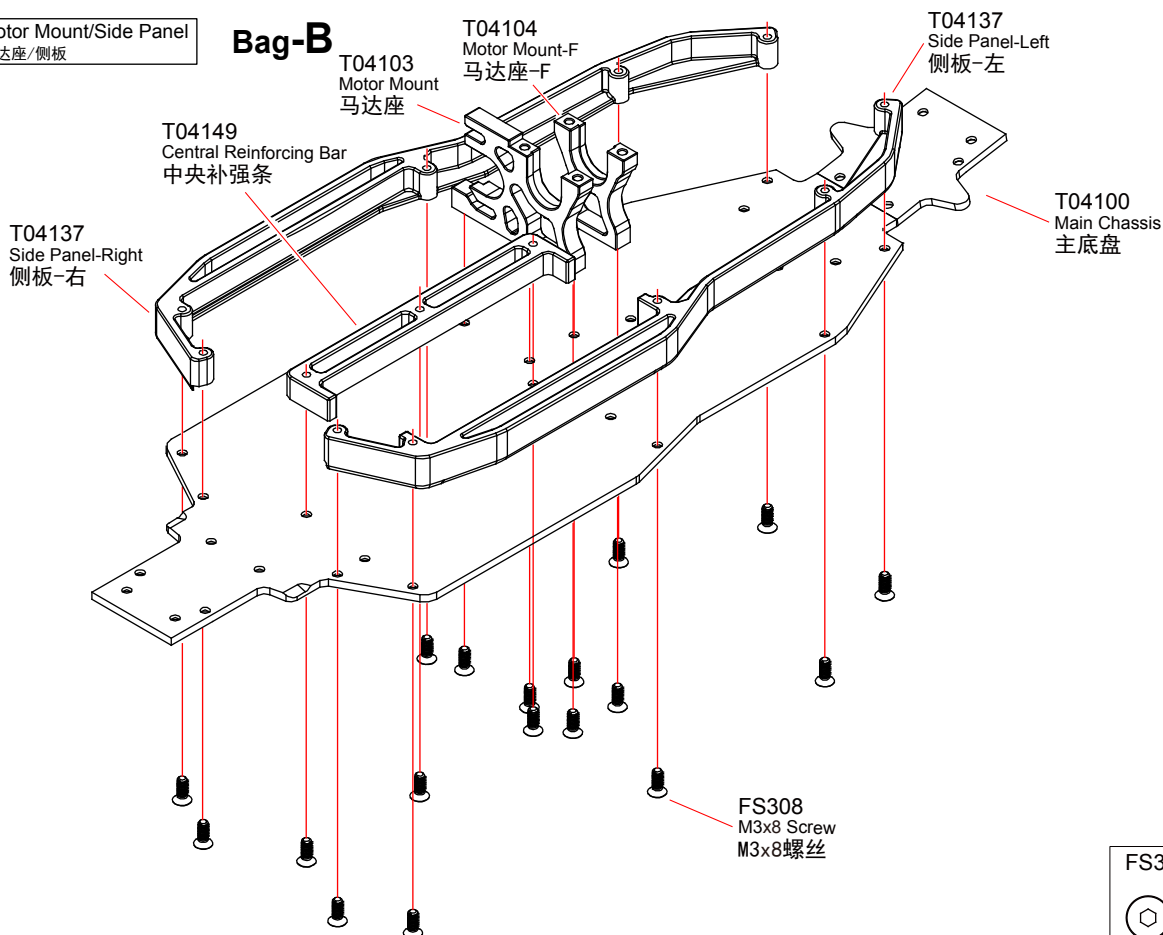



FS308 M3x8 Screw
M3x8螺丝

.....18

2 Diff 差速器

Bag-B x2



TS4040 3.0 E-ing 3.0 E扣	4
T04039 5.1x13x0.2 Washer 5.1x13x0.2垫片	4
T04040 4.8x1.6 O-Ring 4.8x1.6 O环	4
B101504 10x15x4 Ball Bearing 10x15x4轴承	4
T04041 10x12x0.2 Washer 10x12x0.2垫片	6

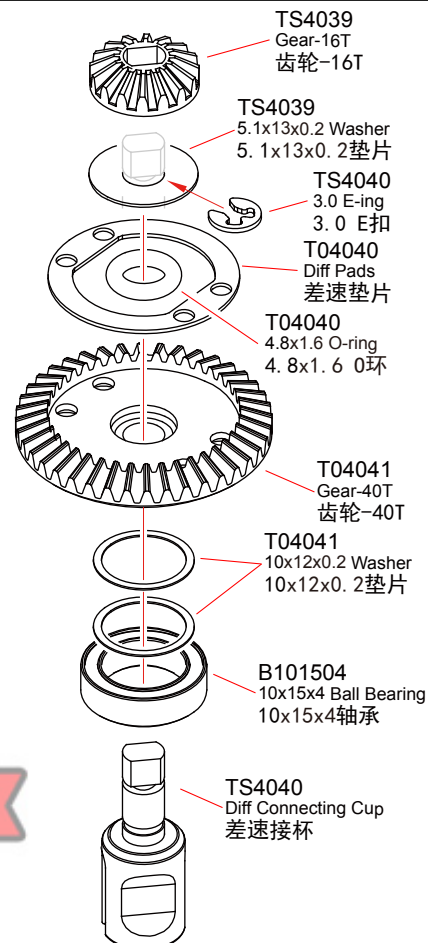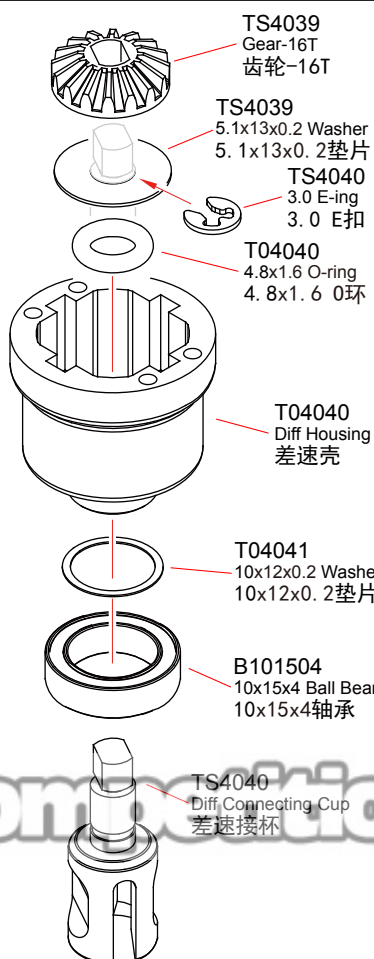

3 Diff 差速器 Bag-B x2

TS4039
Gear-10T
齿轮-10T

TS4039
Diff Shaft
差速轴

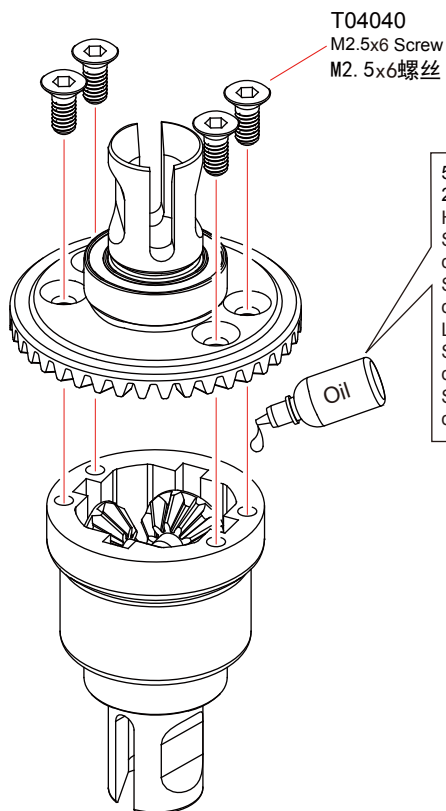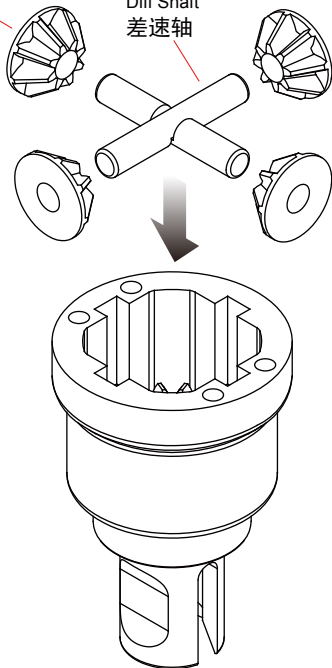

5000# for Front diff, 2000# for Rear diff.
High grip:
Suggest using 7000# differential oil for front, Suggest using 3000# differential oil for rear;
Low grip:
Suggest using 3000# differential oil for front, Suggest using 1000# differential oil for rear.

5000#用於前差速器, 2000#用於後差速器。
高抓地力:
前面建議使用7000#差速油, 後面建議使用3000#差速油;
低抓地力:
前面建議使用3000#差速油, 後面建議使用1000#差速油。

TS4039 Diff Shaft
差速轴

.....4

T04040 M2.5x6 Screw
M2.5x6螺丝

.....8

4 Front Gear-box 前齿轮箱

Bag-B

T04116
85mm Center CVD
85中CVD

B051004
5x10x4 Ball Bearing
5x10x4轴承

T04128
Arm Mount-FR
摆臂固定座-FR

W5802
5x8x0.2 Washer
5x8x0.2垫片

FS312
M3x12 Screw
M3x12螺丝

T04138
Front Gear-box-Cover
前齿轮箱-上盖


T04041
Gear-16T
齿轮-16T

FS308
M3x8 Screw
M3x8螺丝

BS310
M3x10 Screw
M3x10螺丝

Surface
曲面

T04138
Front Gear-box-Lower
前齿轮箱-底座

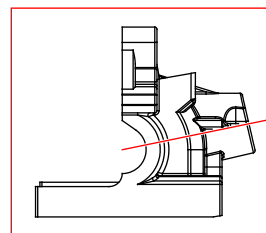

BS310 M3x10 Screw
M3x10螺丝

.....2

B051004 5x10x4 Ball Bearing
5x10x4轴承

.....2

W5802 5x8x0.2 Washer
5x8x0.2垫片

.....2

FS312 M3x12 Screw
M3x12螺丝



.....2

FS308 M3x8 Screw
M3x8螺丝

.....1

5 Front Gear-box 前齿轮箱

Bag-A

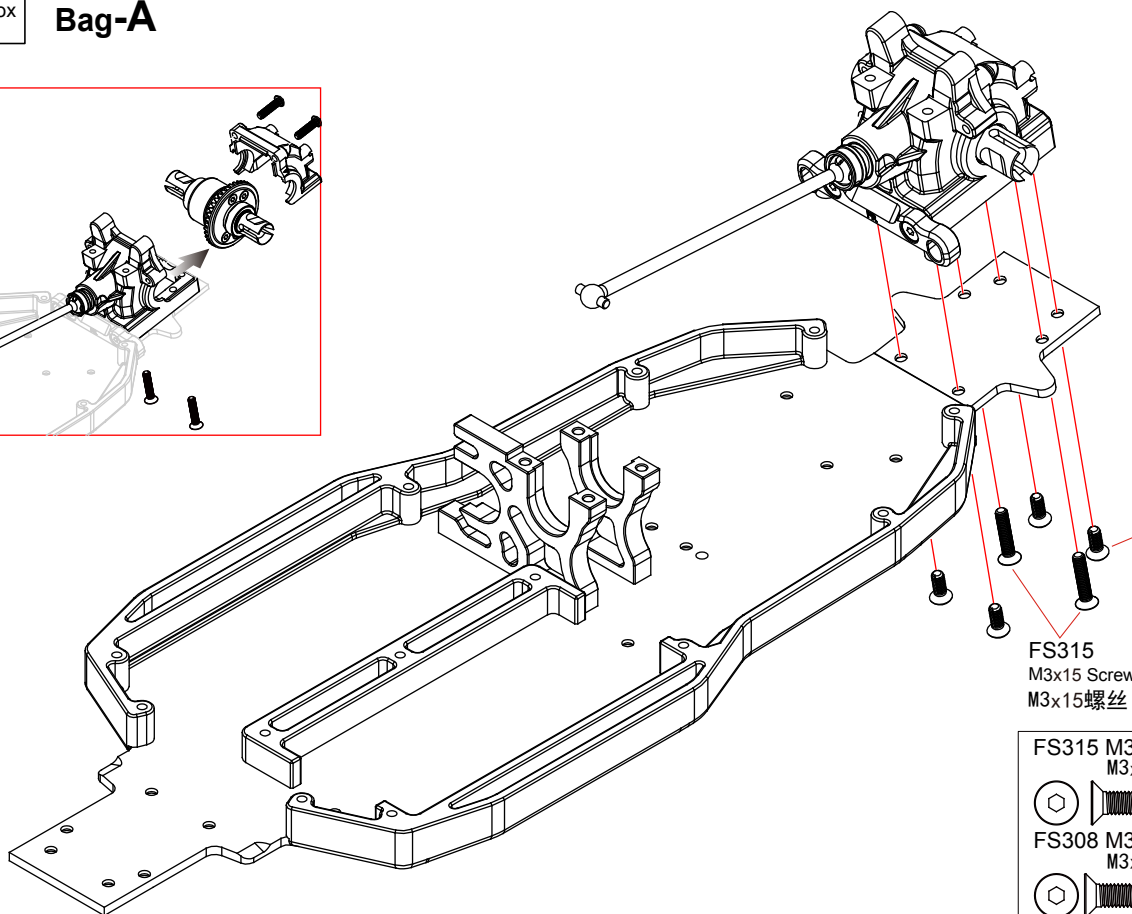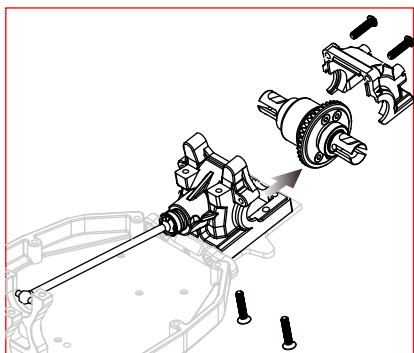


FS308
M3x8 Screw
M3x8螺丝

FS315
M3x15 Screw
M3x15螺丝

FS315 M3x15 Screw M3x15螺丝	2
FS308 M3x8 Screw M3x8螺丝	4

6 Rear Gear-box 后齿轮箱

Bag-A

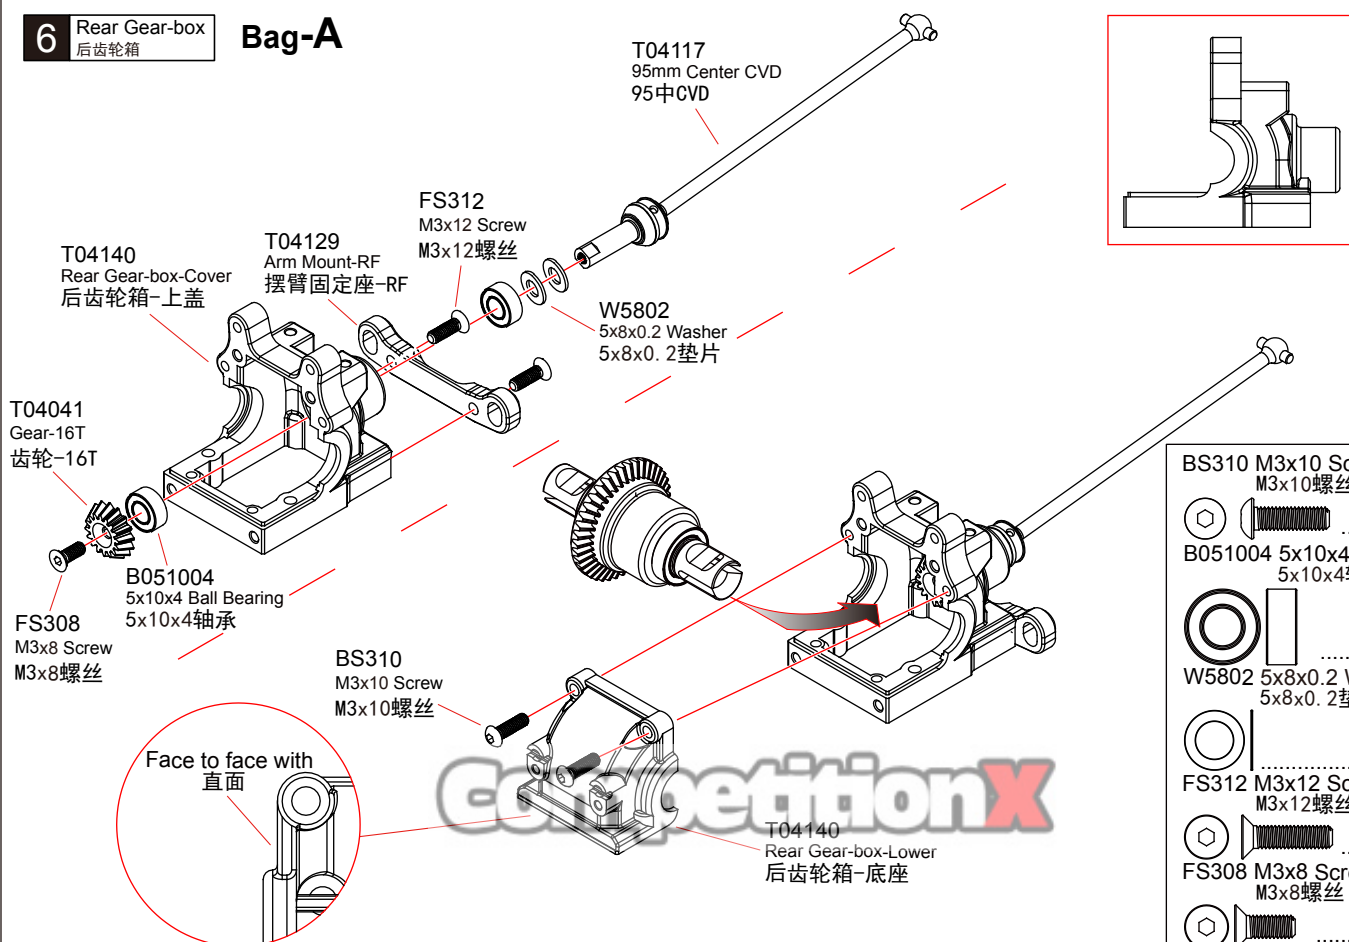

T04117
95mm Center CVD
95中CVD

FS312
M3x12 Screw
M3x12螺丝

T04140
Rear Gear-box-Cover
后齿轮箱-上盖

T04129
Arm Mount-RF
摆臂固定座-RF

W5802
5x8x0.2 Washer
5x8x0.2垫片

T04041
Gear-16T
齿轮-16T

B051004
5x10x4 Ball Bearing
5x10x4轴承

FS308
M3x8 Screw
M3x8螺丝

BS310
M3x10 Screw
M3x10螺丝


Face to face with
直面

T04140
Rear Gear-box-Lower
后齿轮箱-底座

BS310 M3x10 Screw M3x10螺丝	2
B051004 5x10x4 Ball Bearing 5x10x4轴承	2
W5802 5x8x0.2 Washer 5x8x0.2垫片	2
FS312 M3x12 Screw M3x12螺丝	2
FS308 M3x8 Screw M3x8螺丝	1

7 Rear Gear-box 后齿轮箱

Bag-A

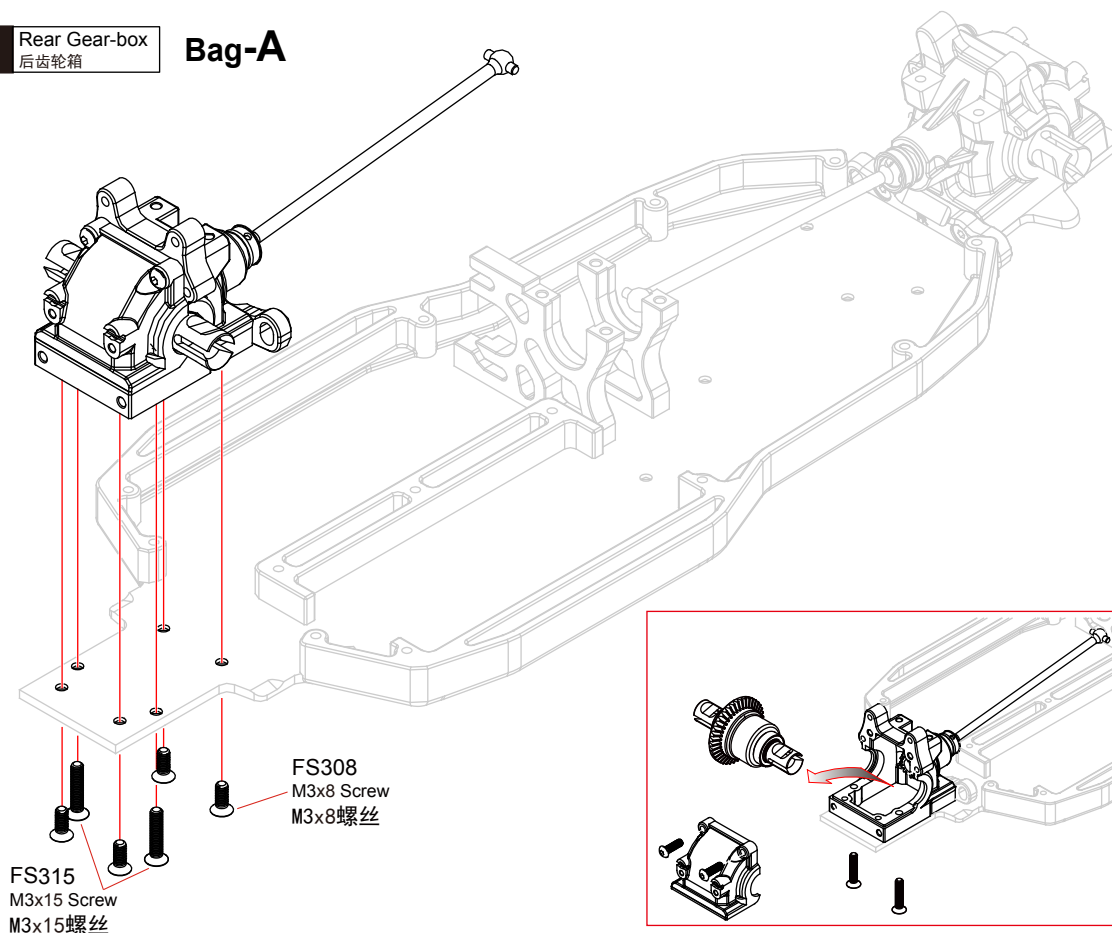

FS315
M3x15 Screw
M3x15螺丝

FS308
M3x8 Screw
M3x8螺丝

FS315 M3x15 Screw
M3x15螺丝2
FS308 M3x8 Screw
M3x8螺丝4

8 Slipper Set 扭限组

Bag-A

P210 2x9.8 Pin
2x9.8钢针

BS305 M3x5 Screw
M3x5螺丝

P208 2x7.8 Pin
2x7.8钢针

B101504 10x15x4 Ball Bearing
10x15x4轴承

T04125 M3x3 Screw
M3x3螺丝

T04132 Torque Limit Set-A
扭限盘-A

T04126 Spur Gear-80T
齿轮-80T

T04131 Anise Torsion Limit Friction Plate
八角扭限摩擦片

T04121 Torsion Spring Limited
扭限弹簧

T04125 M3x3 Screw
M3x3螺丝

T04123 Center Diff Cinenecting Cup
中差接杯

T04125 M3x3 Screw
M3x3螺丝

T04125 Twist The Limit Of Adjusting Ring
扭限调整环

P208 2x7.8 Pin
2x7.8钢针

BS305 M3x5 Screw
M3x5螺丝

B101504 10x15x4 Ball Bearing
10x15x4轴承

T04125 Twist The Limit Of Adjusting Ring
扭限调整环

P208 2x7.8 Pin
2x7.8钢针


BS305 M3x5 Screw
M3x5螺丝

B101504 10x15x4 Ball Bearing
10x15x4轴承

T04125 Twist The Limit Of Adjusting Ring
扭限调整环

P208 2x7.8 Pin
2x7.8钢针

BS305 M3x5 Screw
M3x5螺丝

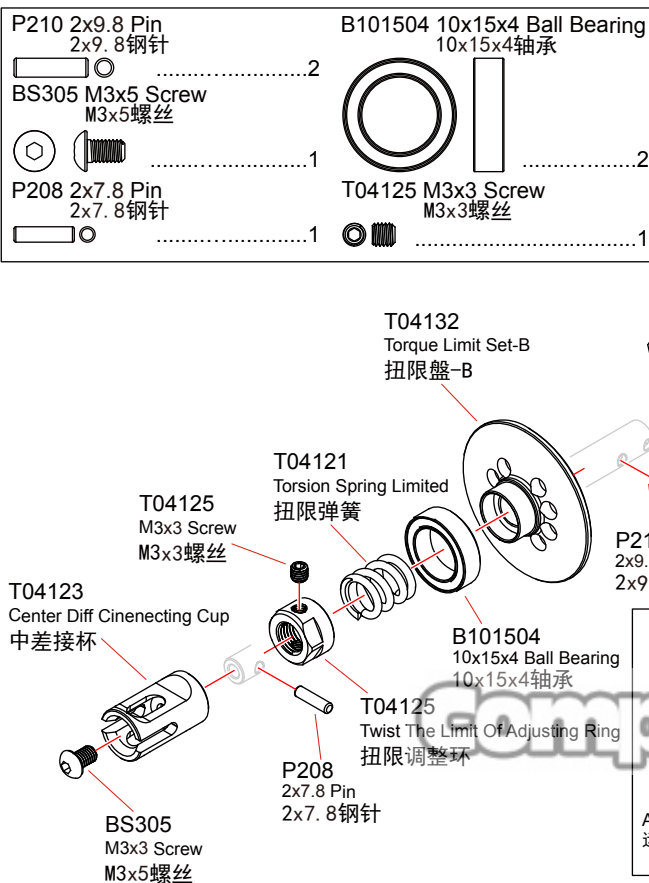

T04123
Center Diff Cinenecting Cup
中差接杯

T04125
M3x3 Screw
M3x3螺丝

T04121
Torsion Spring Limited
扭限弹簧

T04132
Torque Limit Set-B
扭限盘-B

P210
2x9.8 Pin
2x9.8钢针

T04131
Anise Torsion Limit Friction Plate
八角扭限摩擦片

T04126
Spur Gear-80T
齿轮-80T

T04120
Torque Limit Shaft
扭限轴

T04132
Torque Limit Set-A
扭限盘-A

BS305
M3x5 Screw
M3x5螺丝

T04125
Twist The Limit Of Adjusting Ring
扭限调整环


P208
2x7.8 Pin
2x7.8钢针

BS305
M3x5 Screw
M3x5螺丝

B101504
10x15x4 Ball Bearing
10x15x4轴承

T04125
Twist The Limit Of Adjusting Ring
扭限调整环

P208
2x7.8 Pin
2x7.8钢针

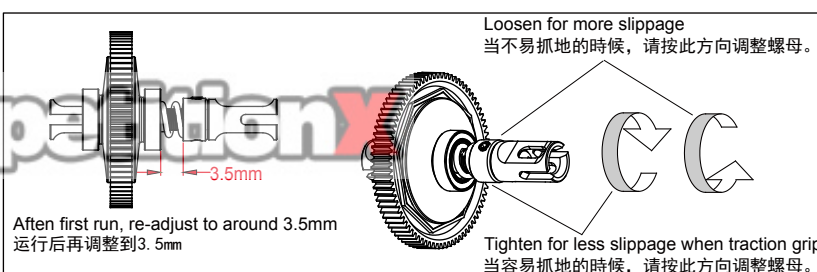


Loosen for more slippage
当不易抓地的時候，请按此方向调整螺母。

After first run, re-adjust to around 3.5mm
运行后再调整到3.5mm

Tighten for less slippage when traction grip
当容易抓地的時候，请按此方向调整螺母。

9 Center Gear 中齿轮


Bag-B

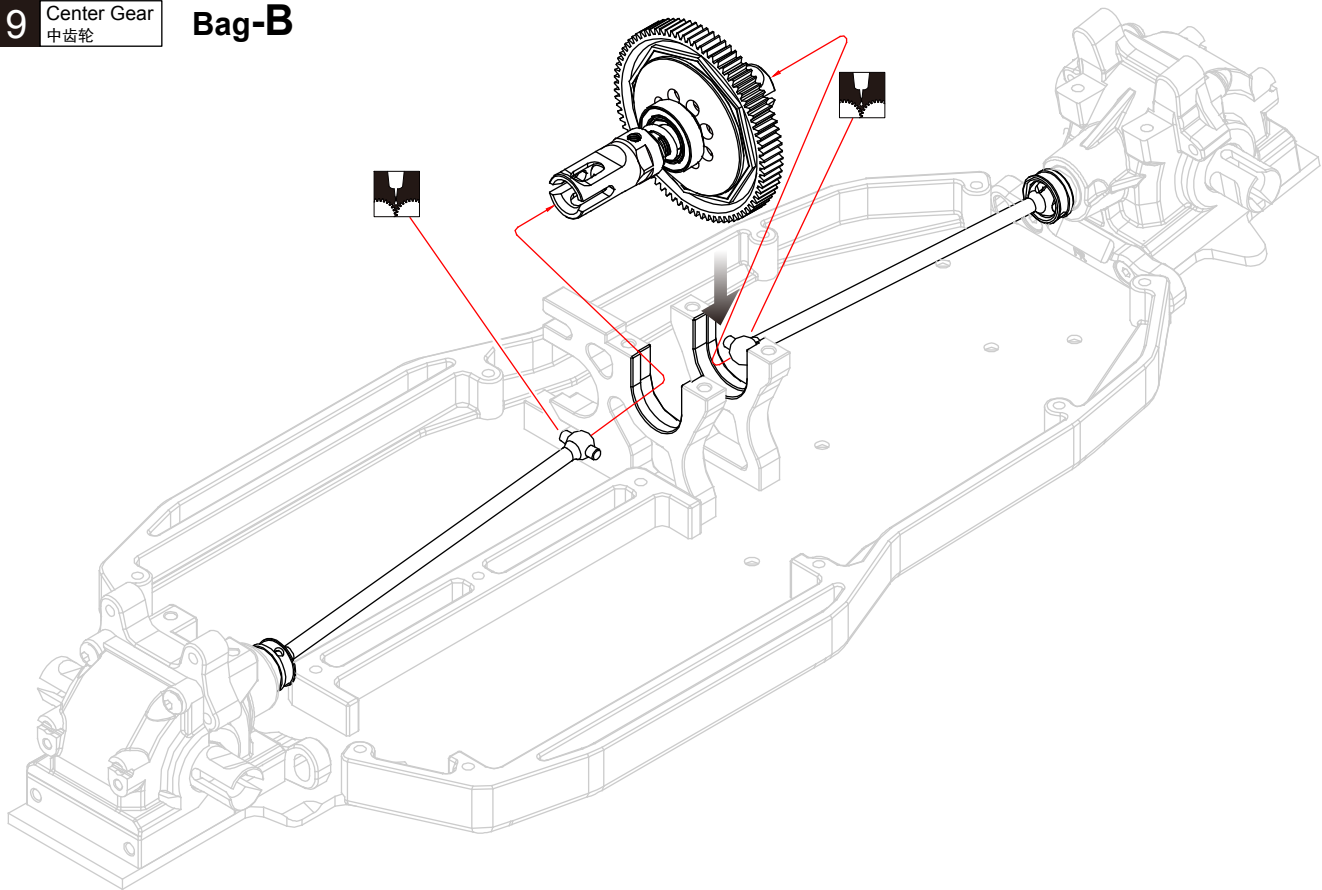


10 Steering Servo 转向伺服系统

Bag-B


Select the servo horn matching the servo being used.
根据舵机选择伺服臂。



Futaba - 25t





Hitec - 24t



Sanwa / JR / KO - 23t


BS308
M3x8 Screw
M3x8螺丝

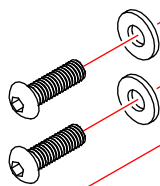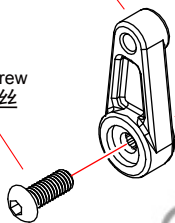

T02081
3x7x0.8 Washer
3x7x0.8垫片

Servo
伺服机 X


T04005
Servo Mount
伺服机座





W3708 3x7x0.8 Washer
3x7x0.8垫片

BS308 M3x8 Screw
M3x8螺丝


.....4
.....5

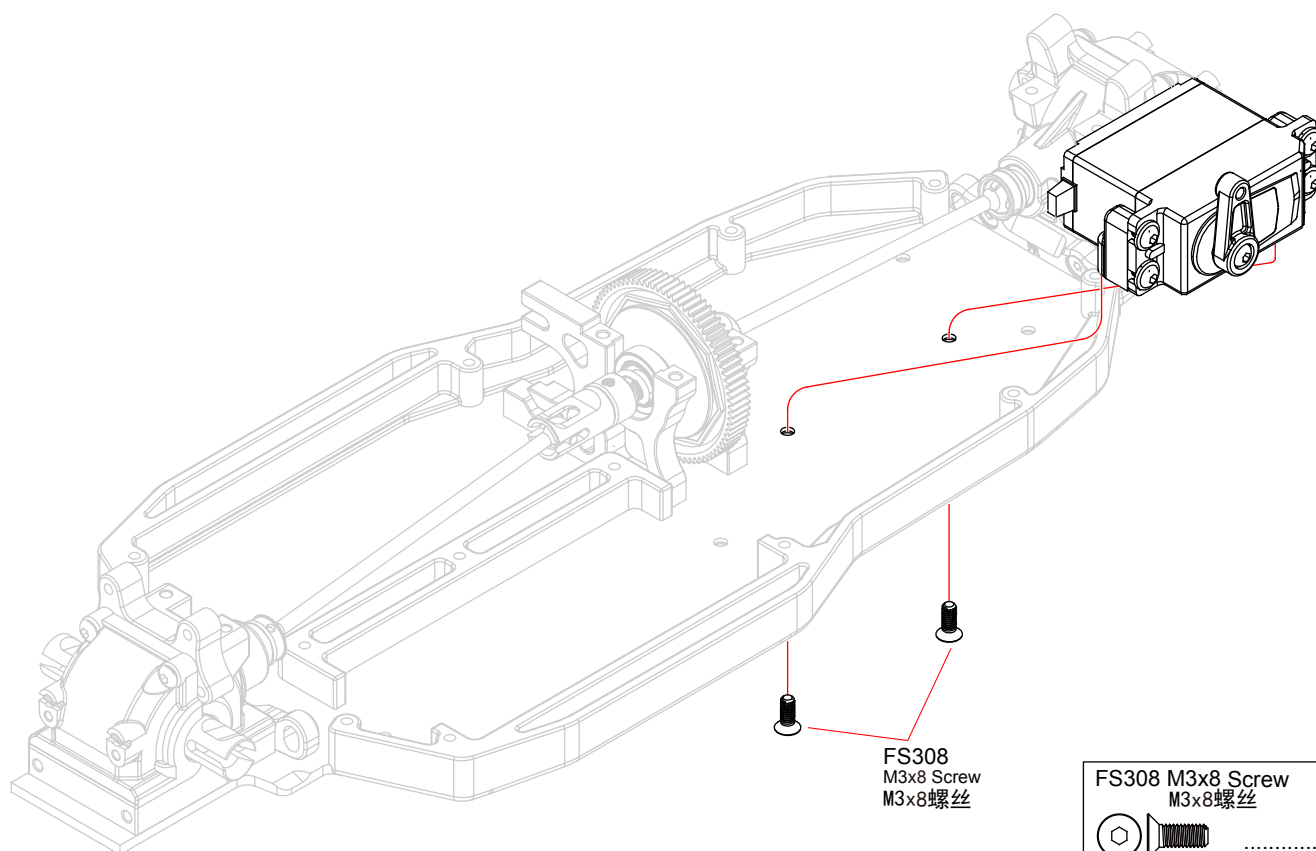

FS308 M3x8 Screw
M3x8螺丝

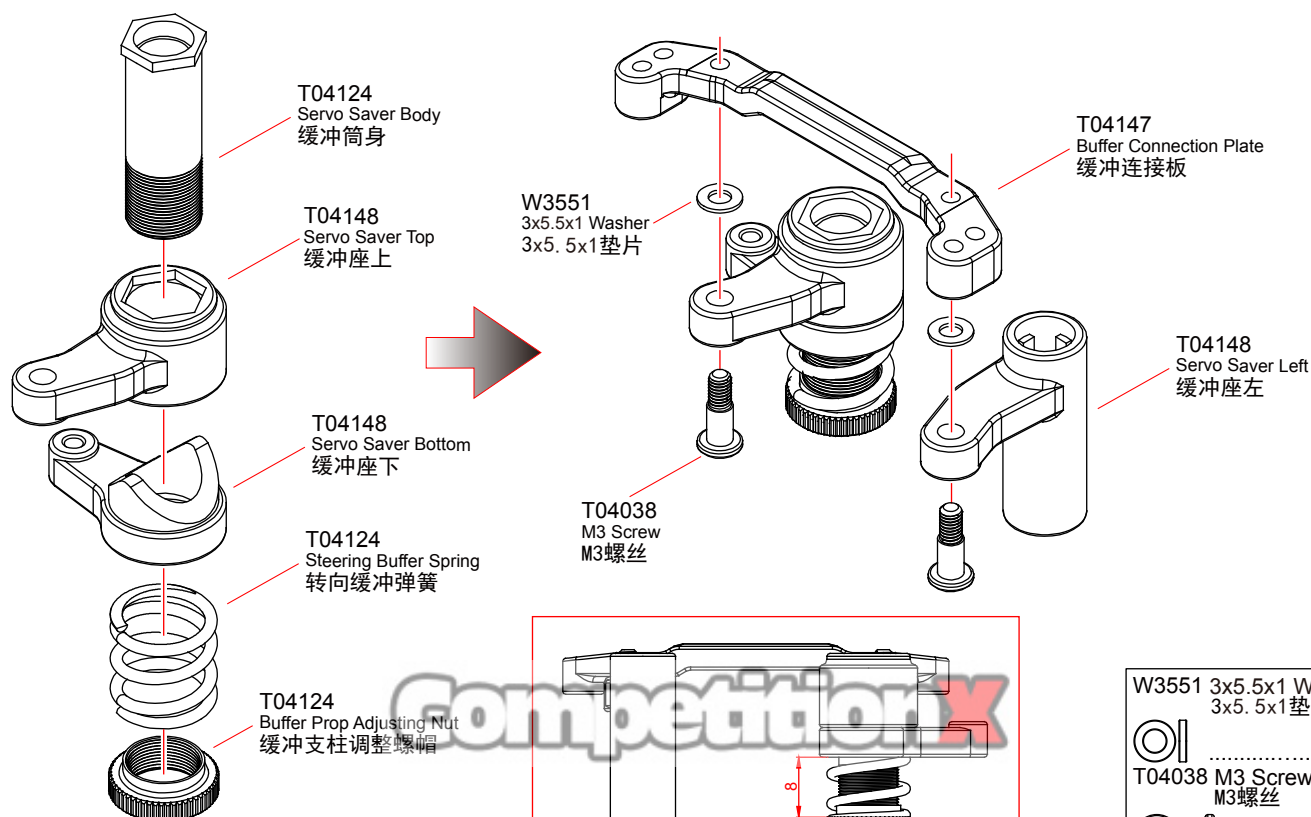

W3551 3x5.5x1 Washer
3x5.5x1垫片





T04038 M3 Screw
M3螺丝



13 Buffer



Bag-B

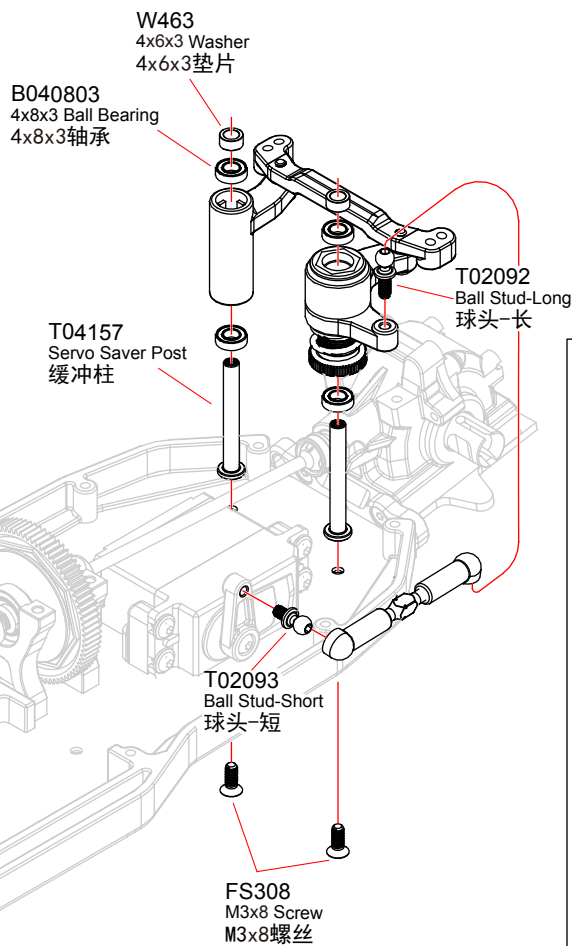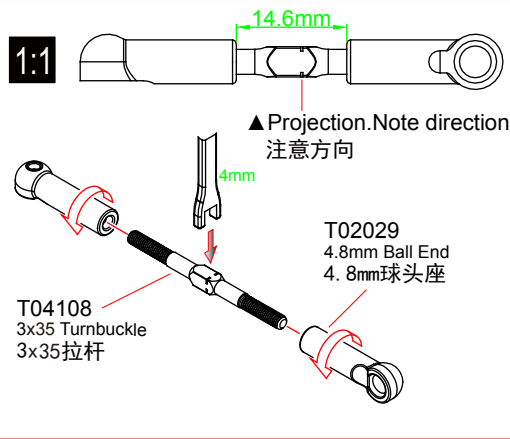

B040803 4x8x3 Ball Bearing 4x8x3轴承	4
W463 4x6x3 Washer 4x6x3垫片	2
T02093 Ball Stud-Short 球头-短	1
T02092 Ball Stud-Long 球头-长	1
FS308 M3x8 Screw M3x8螺丝	2
T02029 4.8mm Ball End 4.8mm球头座	2
T04108 3x35 Turnbuckle 3x35拉杆	1

14 Top Deck/Car Shell Column


Bag-B

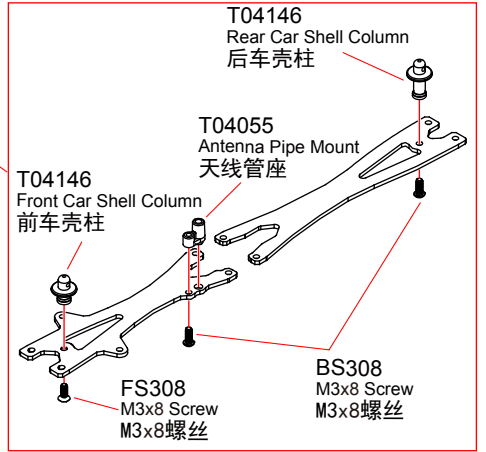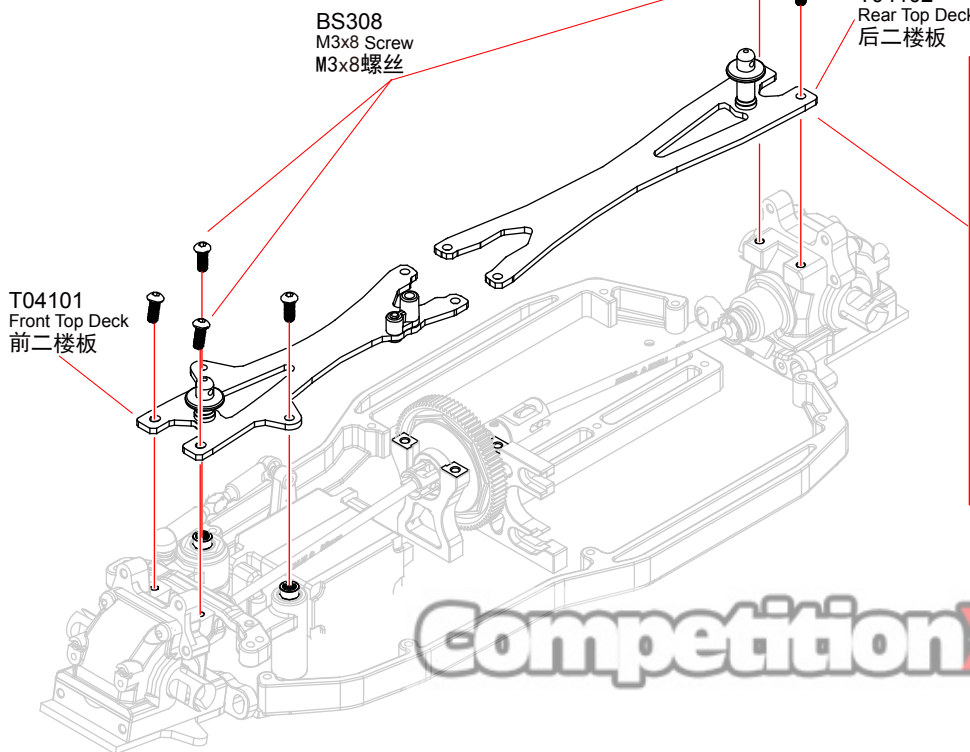

FS308 M3x8 Screw M3x8螺丝	1
BS308 M3x8 Screw M3x8螺丝	8

15 Front Shock Tower 前避震架


Bag-B

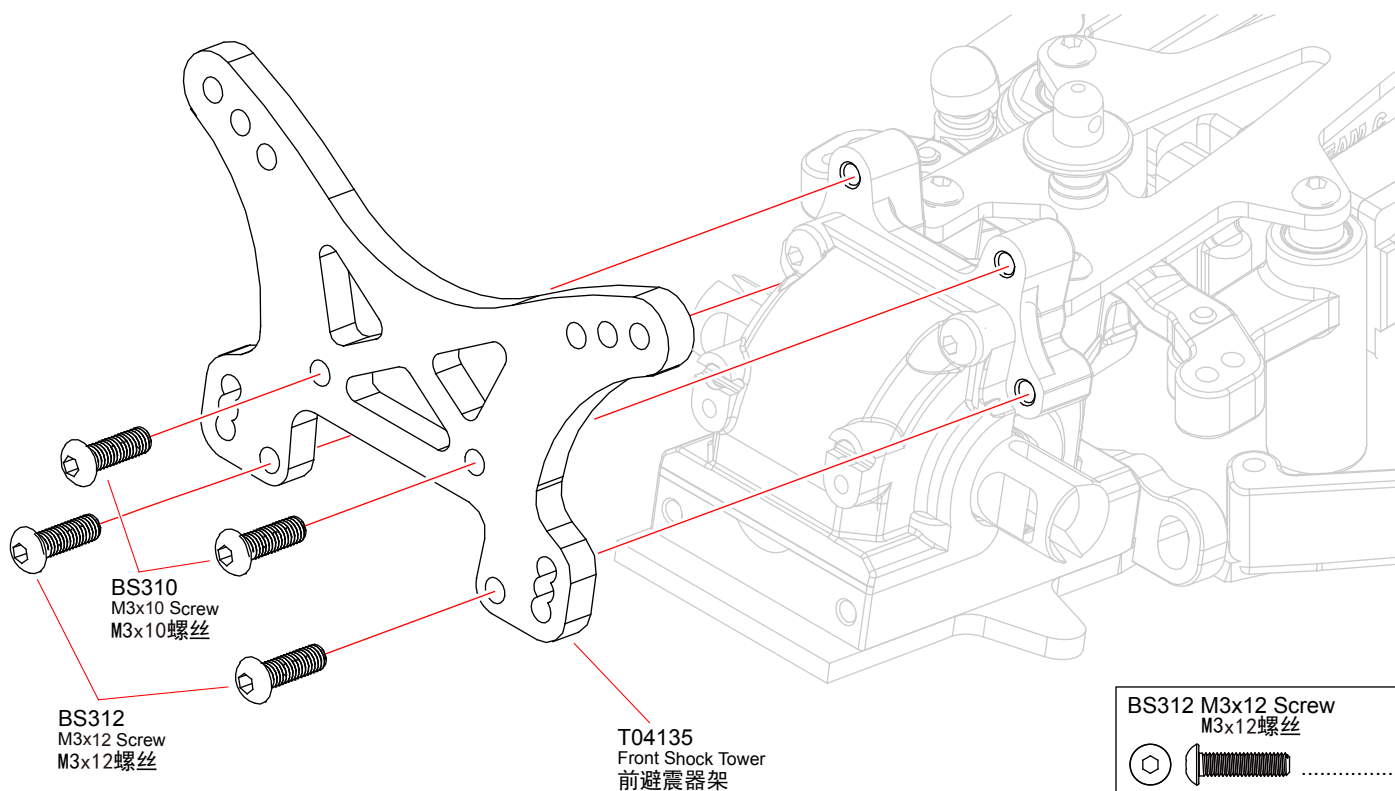

BS312 M3x12 Screw M3x12螺丝	2
BS310 M3x10 Screw M3x10螺丝	2

16 Rear Shock Tower 后避震架


Bag-B

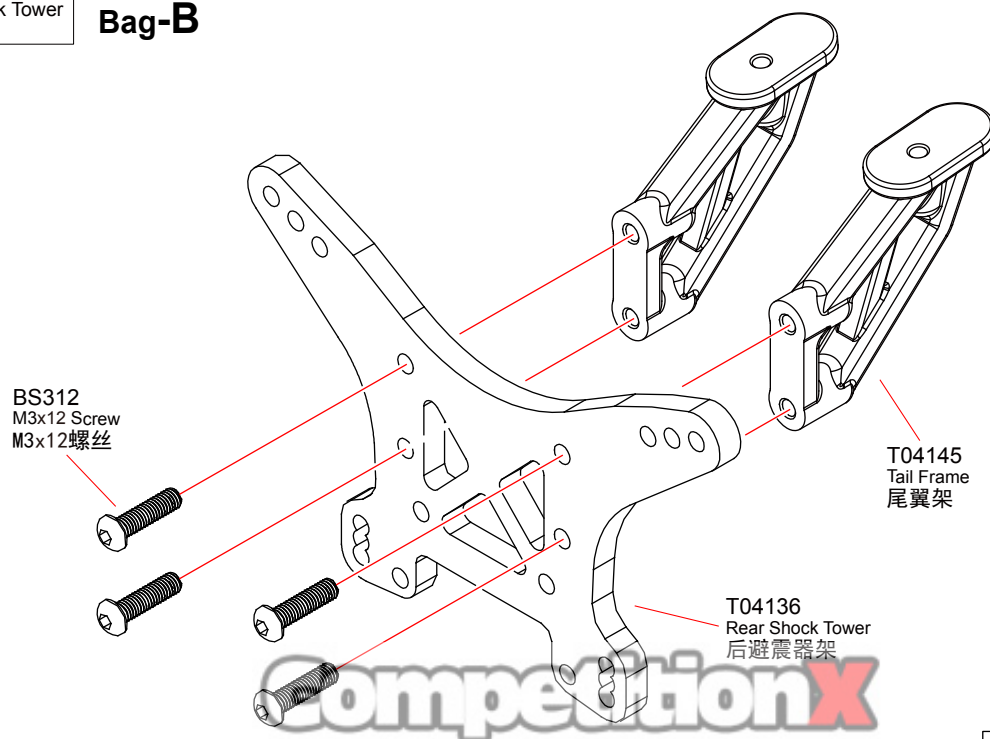

BS312 M3x12 Screw M3x12螺丝	4
------------------------------	--------


17 Rear Shock Tower
后避震架

Bag-B

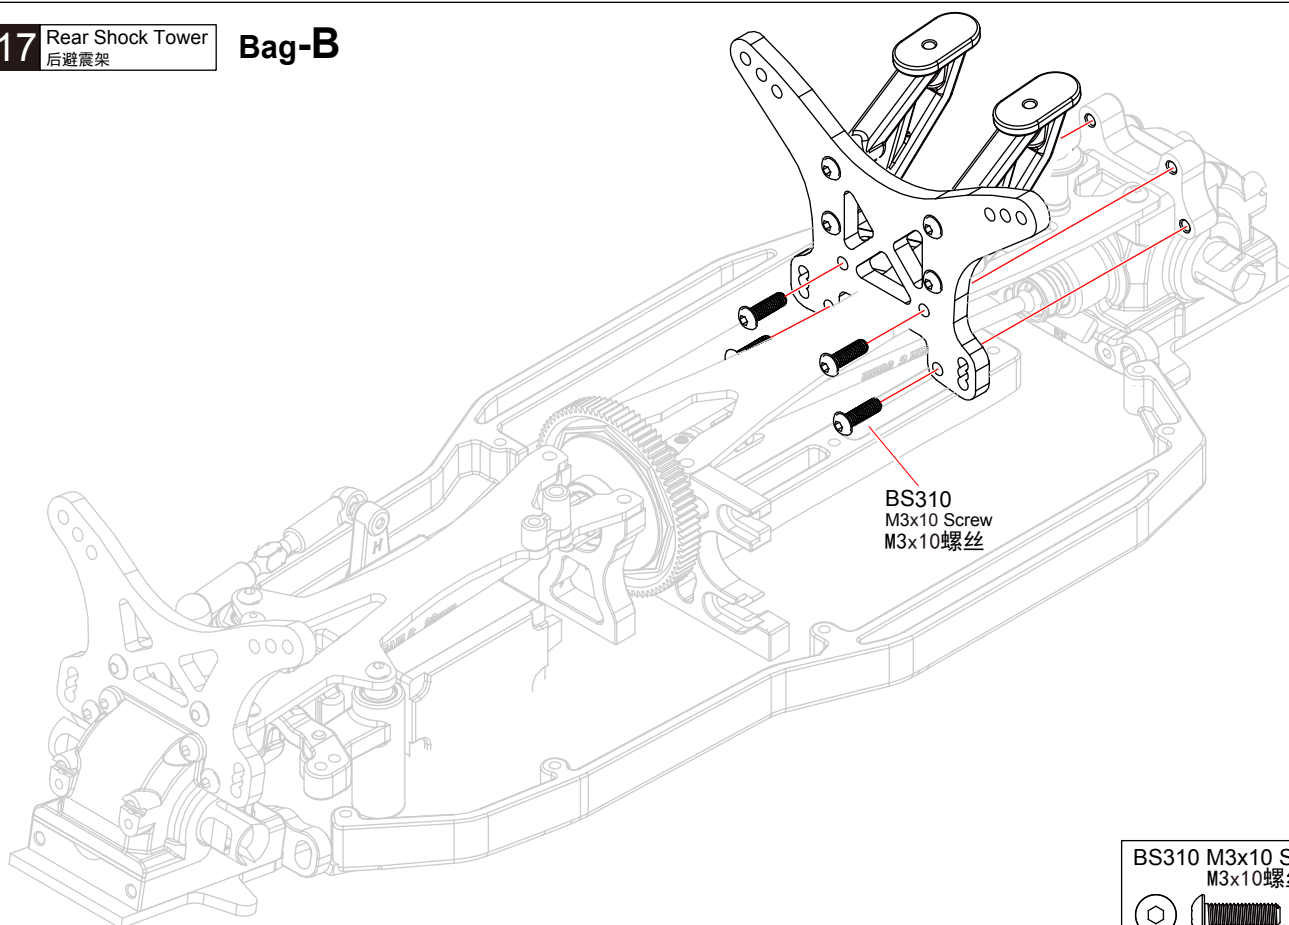

BS310
M3x10 Screw
M3x10螺丝


BS310 M3x10 Screw
M3x10螺丝



4

18 Difference On The Roof
中差上顶板

Bag-B

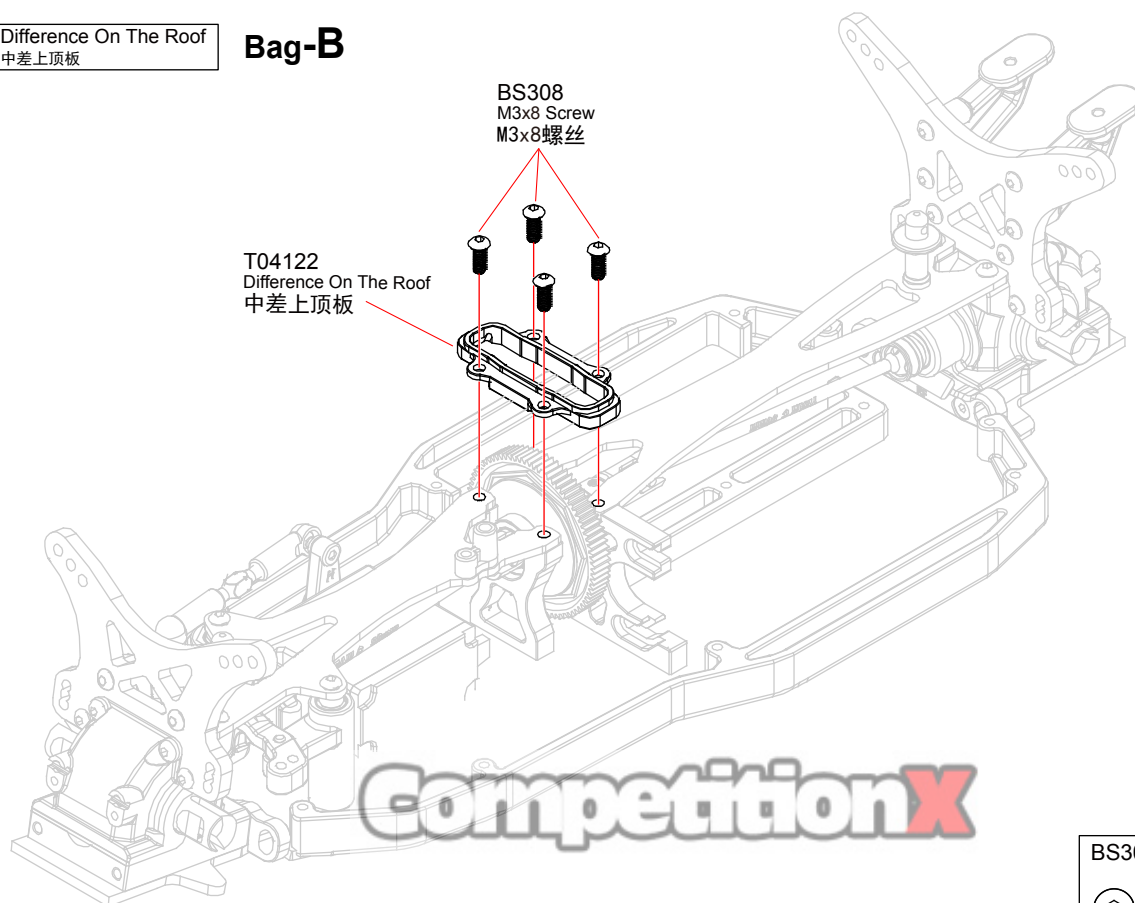


BS308
M3x8 Screw
M3x8螺丝

T04122
Difference On The Roof
中差上顶板

CompetitionX


BS308 M3x8 Screw
M3x8螺丝



4

19 Front Hub Carriers 前轮座


Bag-B

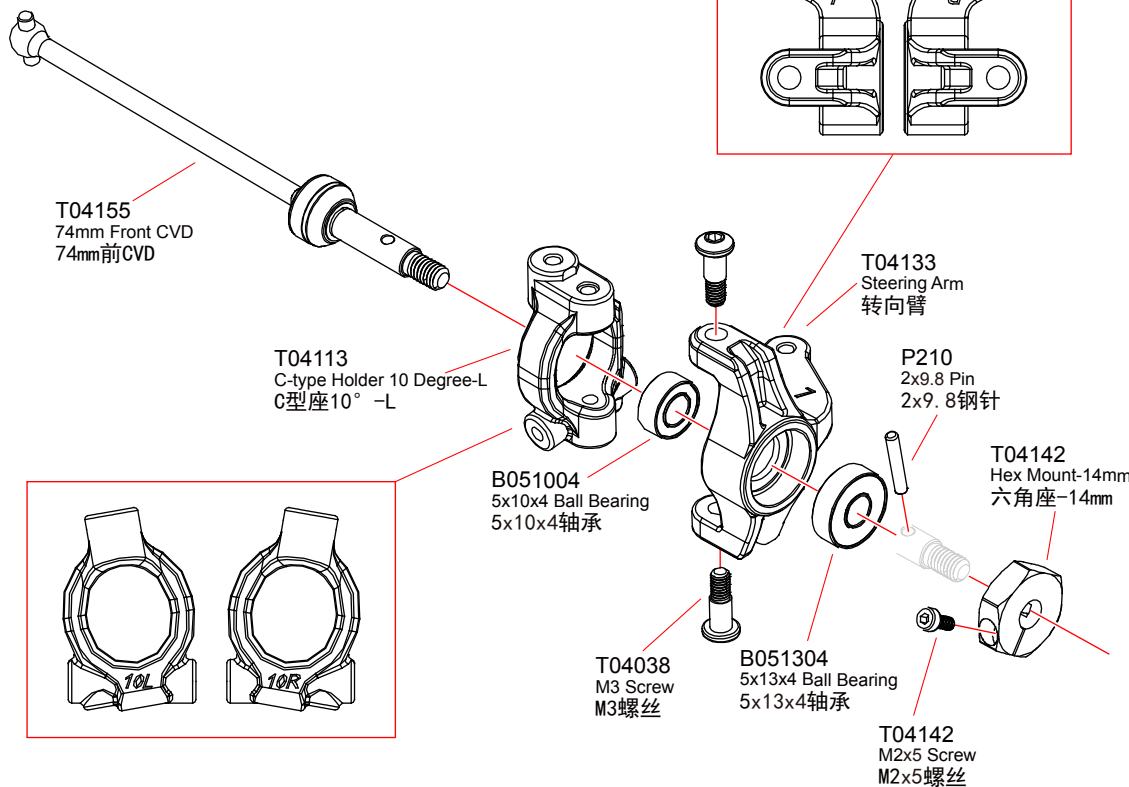

T04038 M3 Screw M3螺丝	4
B051304 5x13x4 Ball Bearing 5x13x4轴承	2
B051004 5x10x4 Ball Bearing 5x10x4轴承	2
T04142 M2x5 Screw M2x5螺丝	2
P210 2x9.8 Pin 2x9.8钢针	2

20 Front Lower Arm 前下摆臂


Bag-B

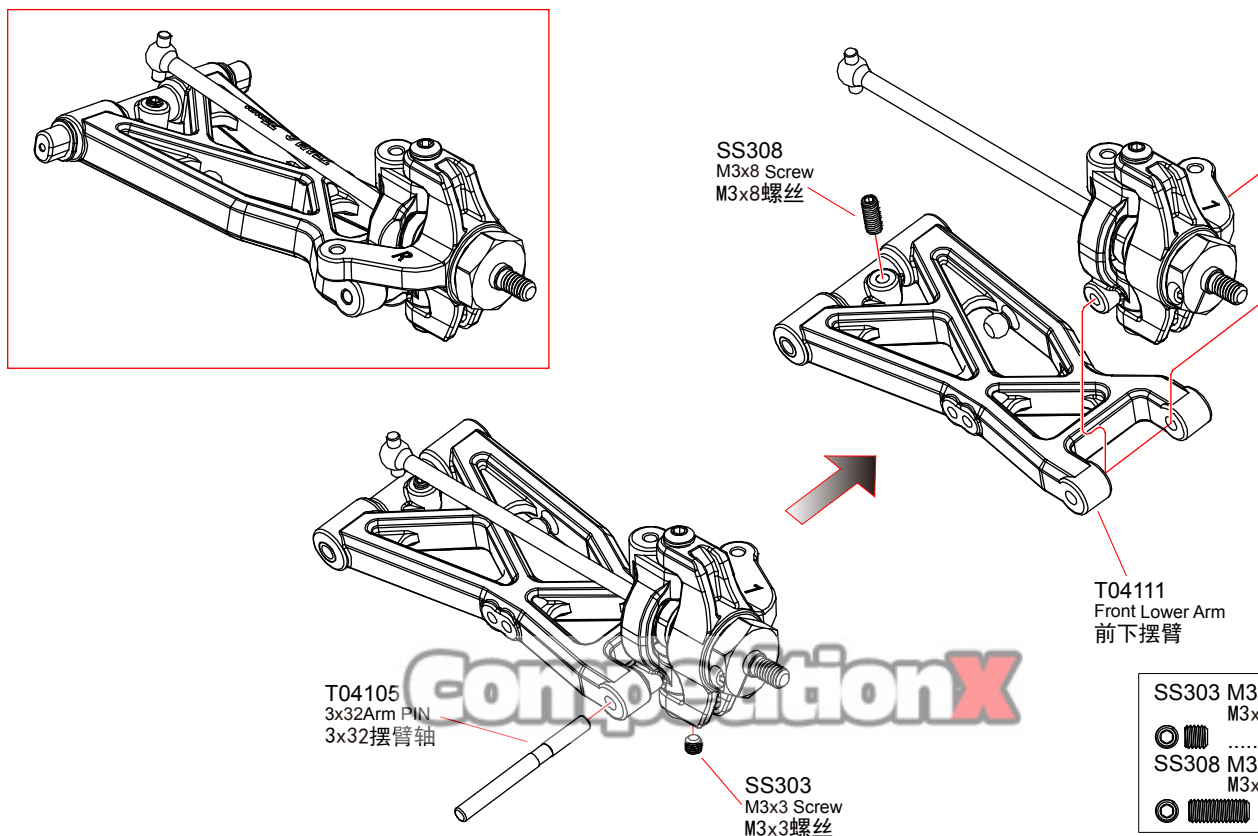

SS303 M3x3 Screw M3x3螺丝	2
SS308 M3x8 Screw M3x8螺丝	2

Apply threadlocker(screw cement)
打螺丝胶水

Assemble both Left and Right
组裝左和右

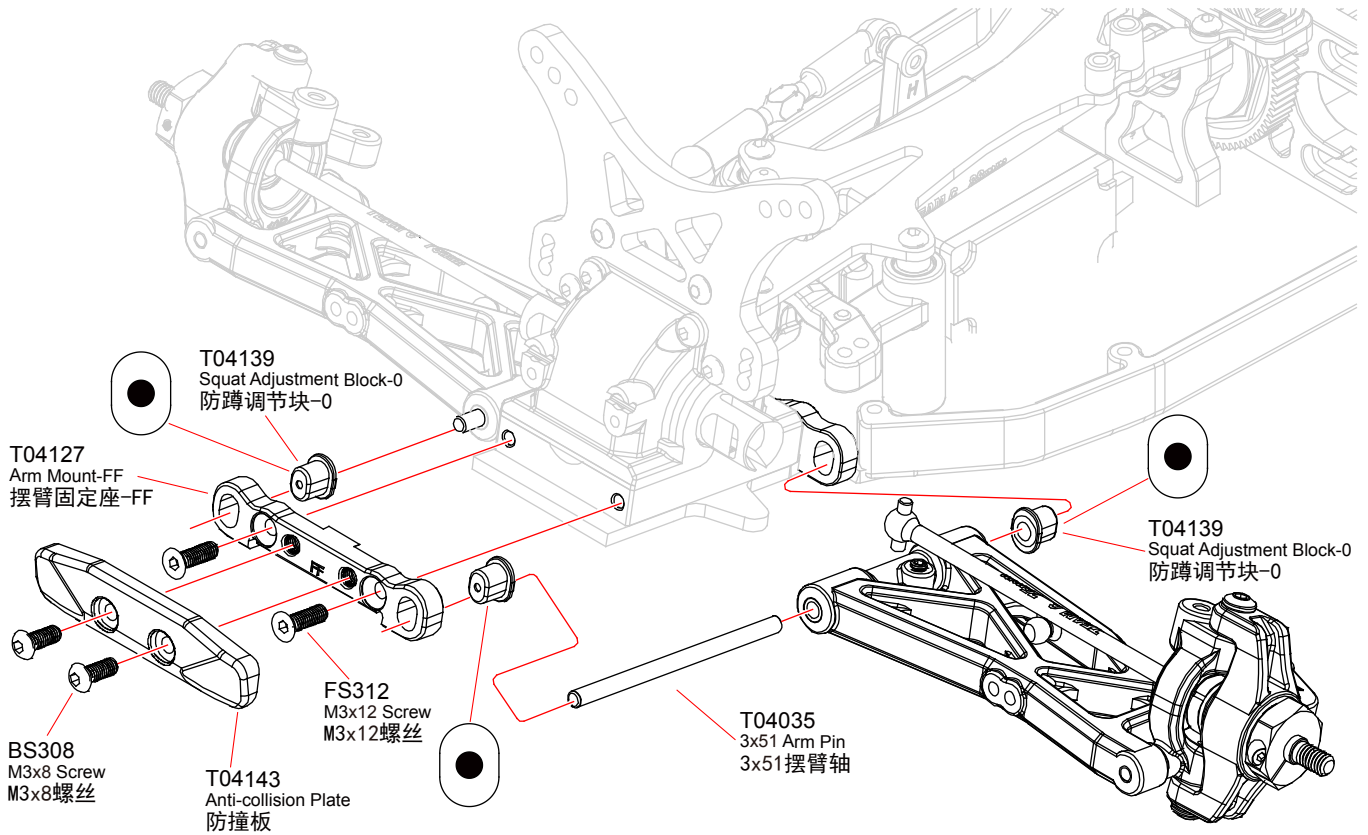

kick-up

FF	FR	(°)
		=10°
		=9°
		=11°
		=11°
		=10°
		=12°
		=9°
		=8°
		=10°

ROLL-CENTER

FF	FF	(mm)
		=+0.9mm
		=0mm
		=-0.9mm


T04035 3x51 Arm PIN
3x51摆臂轴

FS312 M3x12 Screw
M3x12螺丝


BS308 M3x8 Screw
M3x8螺丝




1:1 x1 Front Upper Rod-L
前上拉杆-L

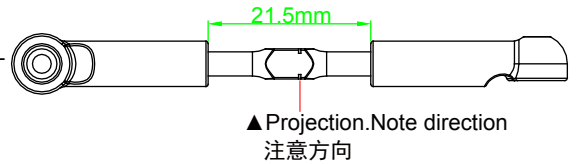



1:1 x1 Front Upper Rod-R
前上拉杆-R

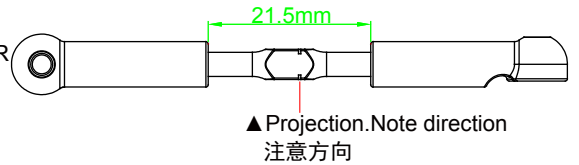


1:1 x2 Rear Upper Rod
后上拉杆

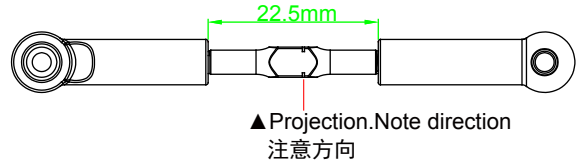

1:1 x2 Draglink
转向拉杆

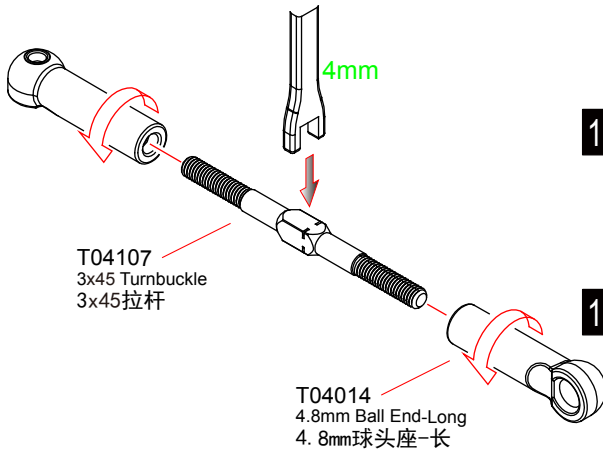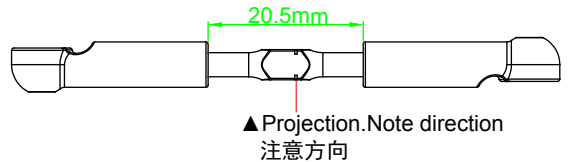


T04107 3x45 Turnbuckle
3x45拉杆




T04014 4.8mm Ball End-Long
4.8mm球头座-长




W3551 3x5.5x1 Washer
3x5.5x1垫片



T02084 M3 Nylon Nut
M3尼龙螺母




T02092 Ball Stud-Long
球头-长

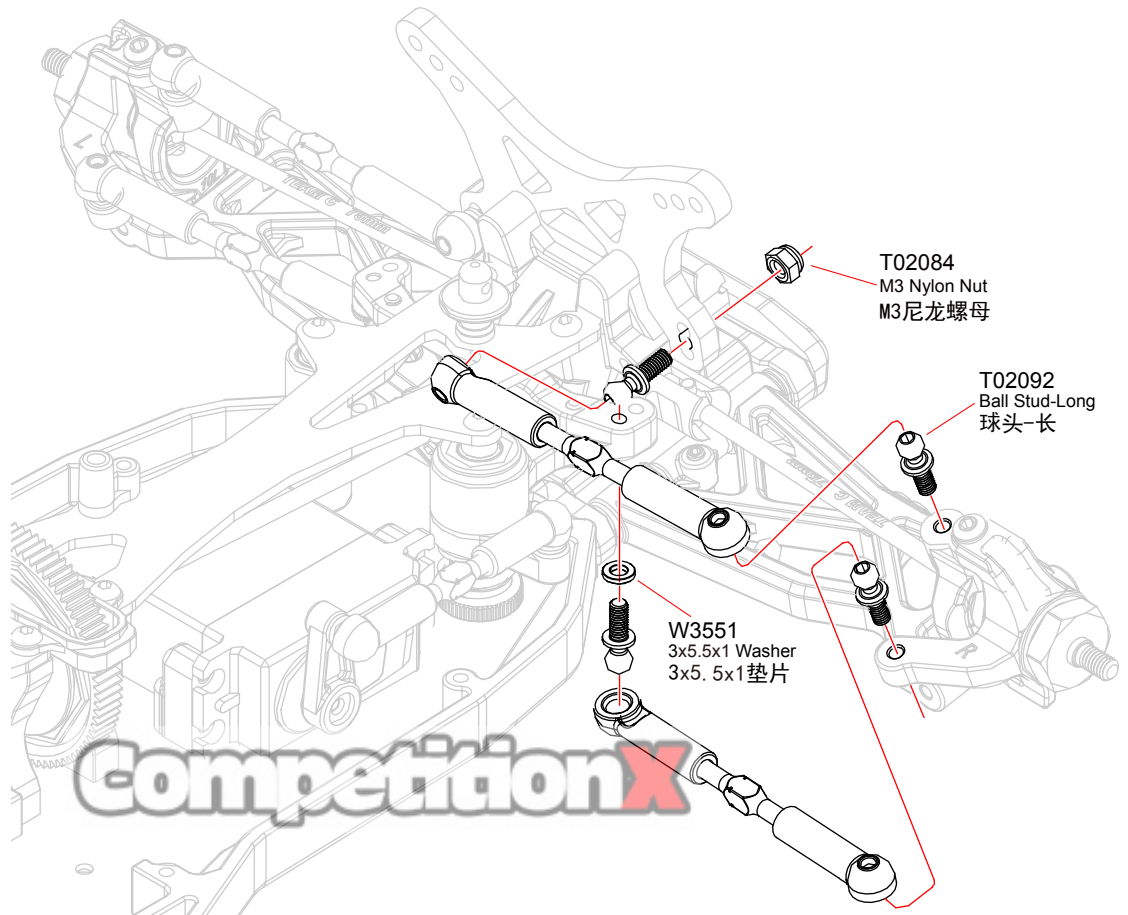

24 Rear Hub Carriers 后轮座

Bag-C x2

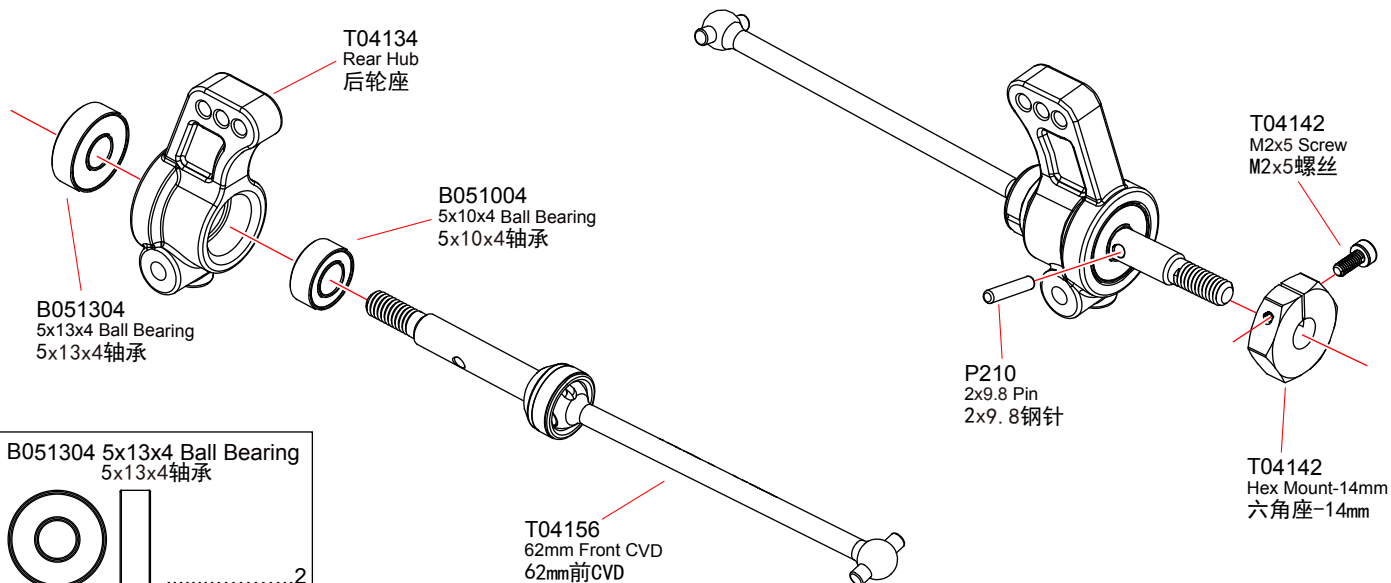

B051304 5x13x4 Ball Bearing
5x13x4轴承



2

B051004 5x10x4 Ball Bearing
5x10x4轴承




2

T04142 M2x5 Screw
M2x5螺丝



2

P210 2x9.8 Pin
2x9.8钢针




2

T04142 Hex Mount-14mm
六角座-14mm




2

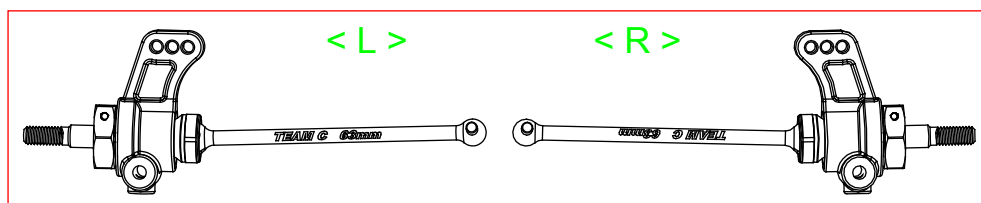

25 Rear Lower Arm 后下摆臂

Bag-C

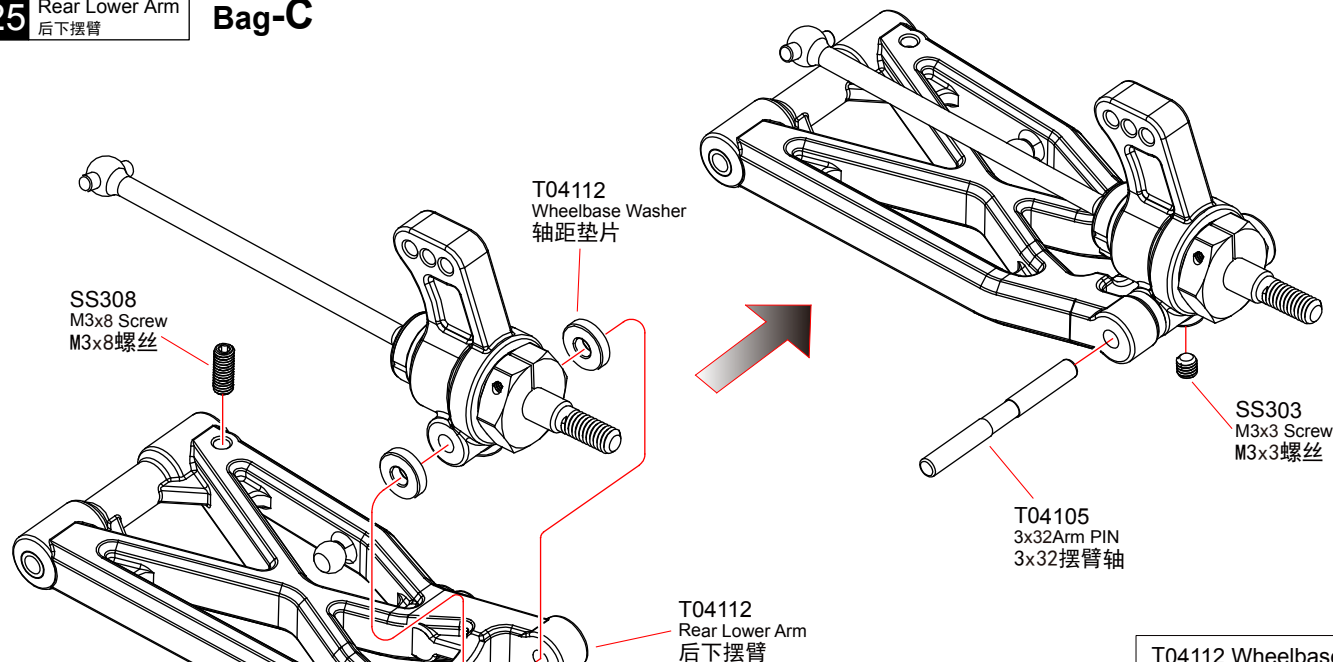

T04112 Wheelbase Washer
轴距垫片



4

SS303 M3x3 Screw
M3x3螺丝



2

SS308 M3x8 Screw
M3x8螺丝





2



Apply threadlocker(screw cement)
打螺絲膠水



Assemble both Left and Right
組裝左和右

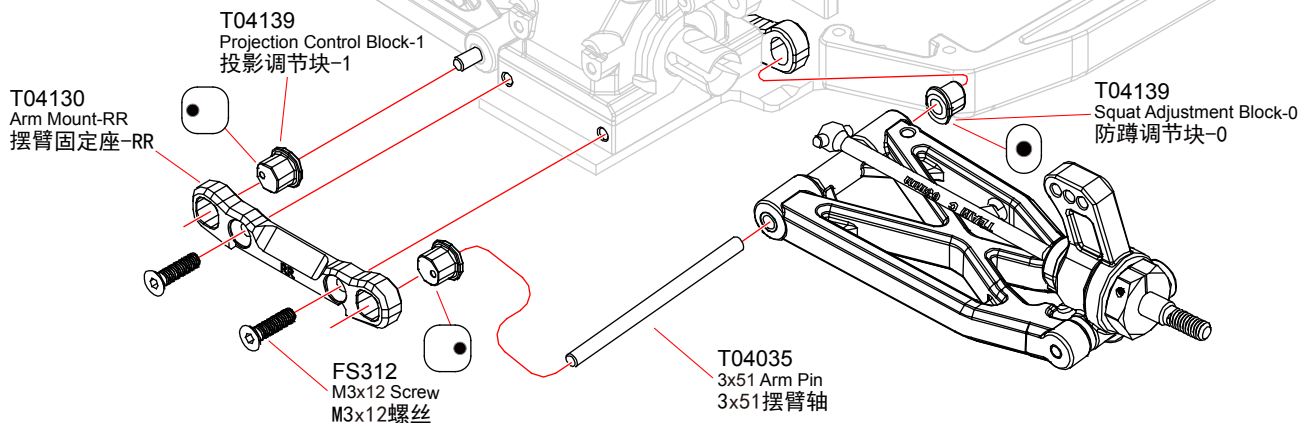

ANTI-SQUAT


RF	RR	(°)
		=2°
		=1°
		=3°
		=3°
		=2°
		=4°
		=1°
		=0°
		=2°

ROLL-CENTER


FF	FF	(mm)
		=+0.9mm
		=0mm
		=-0.9mm

TOE-IN


RF	RR	(°)
		=2.5°
		=3.5°
		=1.5°

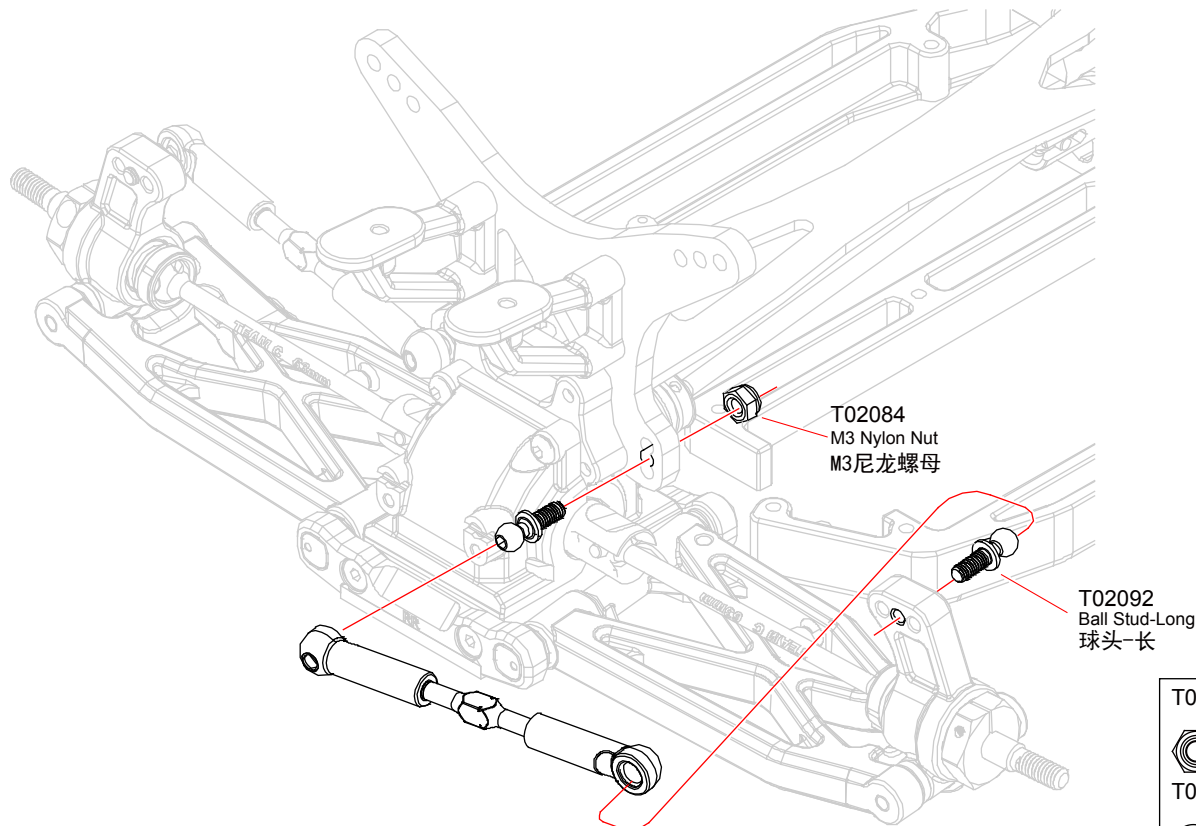

T02084 M3 Nylon Nut M3尼龙螺母	2
T02092 Ball Stud-Long 球头-长	4

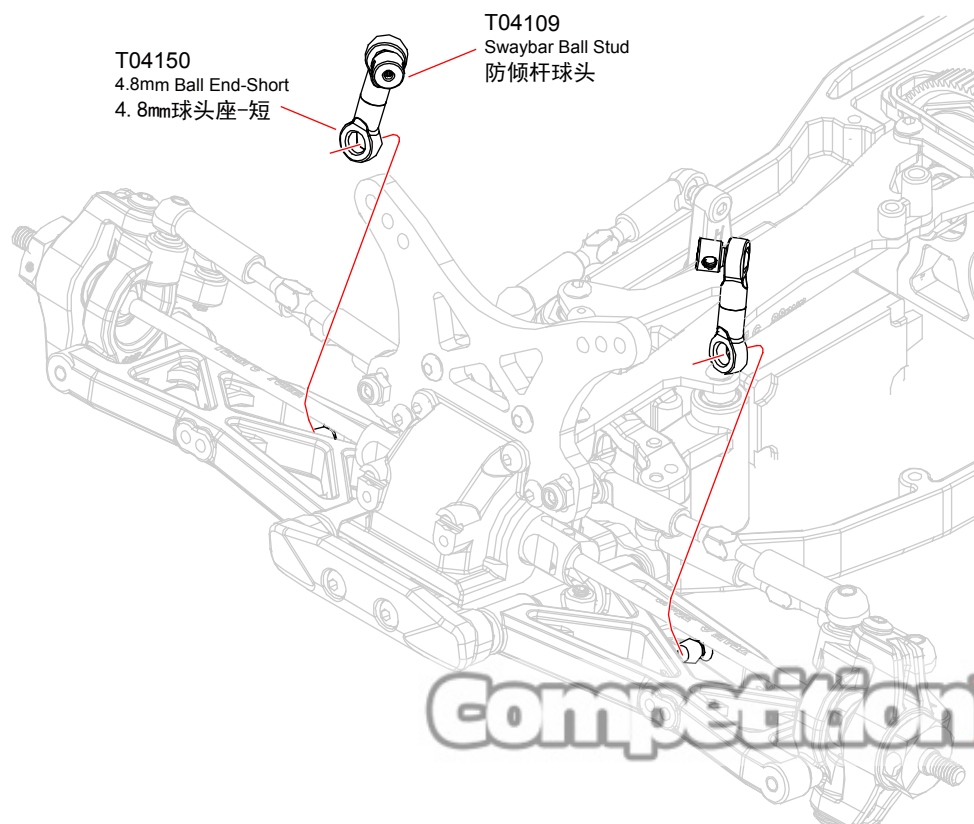


x2		
T04150 M3x10 Screw M3x10螺丝		

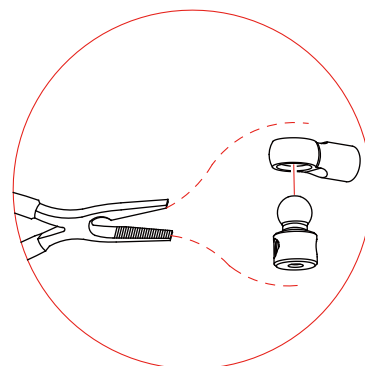

29 Front Swaybar 前防倾杆

Bag-D

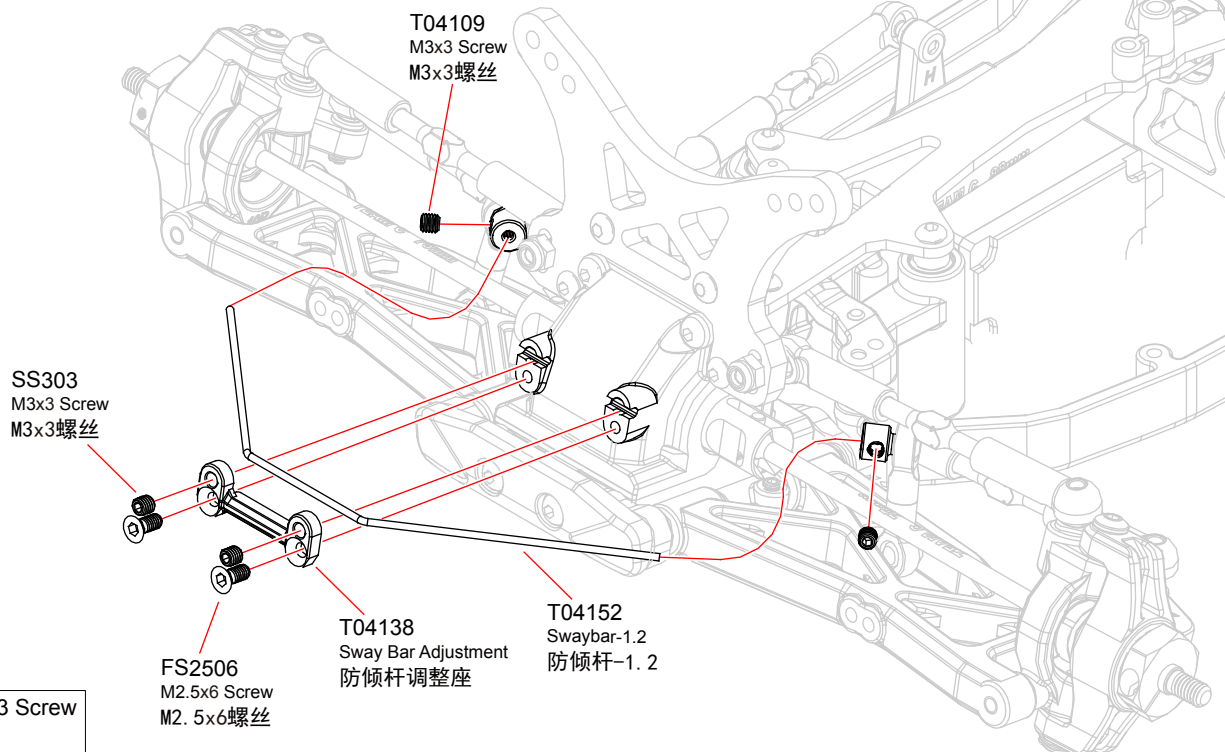

SS303/T04109 M3x3 Screw
M3x3螺丝


.....4

FS2506 M2.5x6 Screw
M2.5x6螺丝

.....2


30 Rear Swaybar 后防倾杆

Bag-D

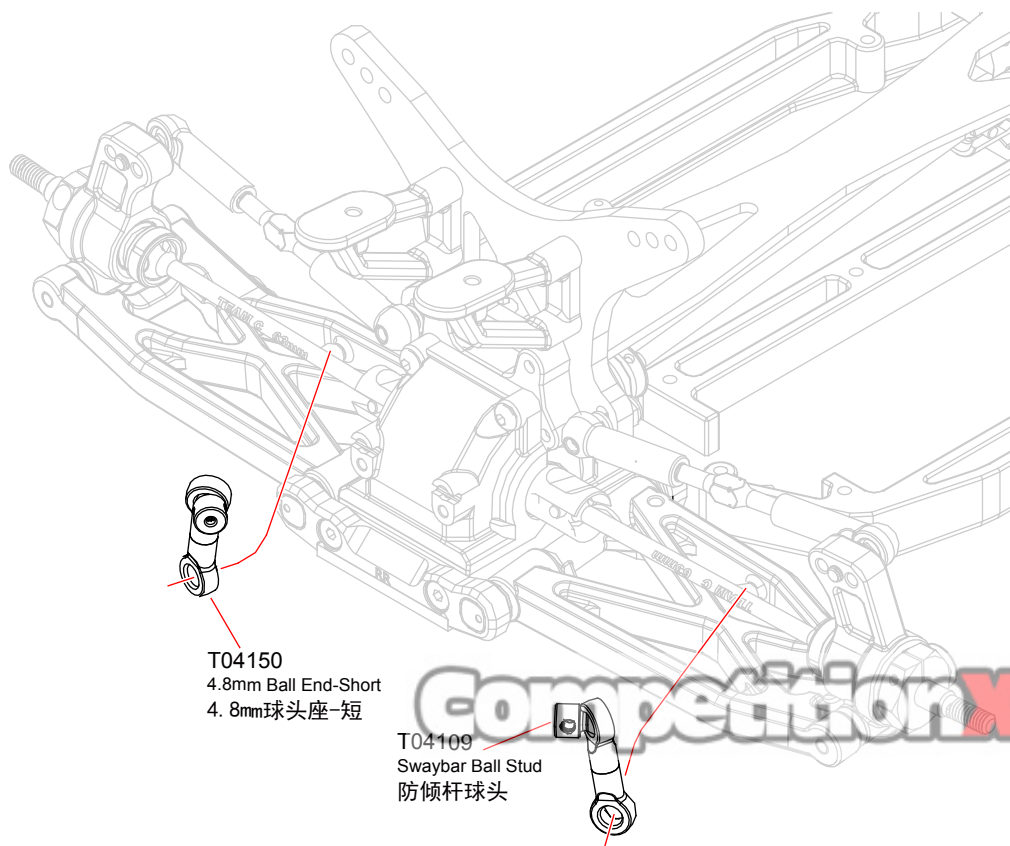

x2


T04150
M3x10 Screw
M3x10螺丝

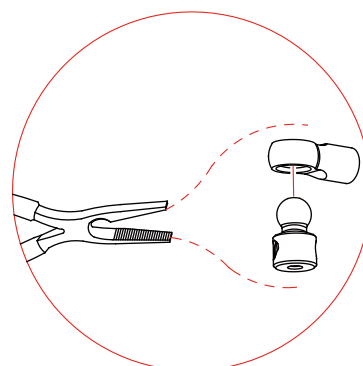

Apply threadlocker(screw cement)
打螺丝胶水

31 Rear Swaybar 后防倾杆

Bag-E

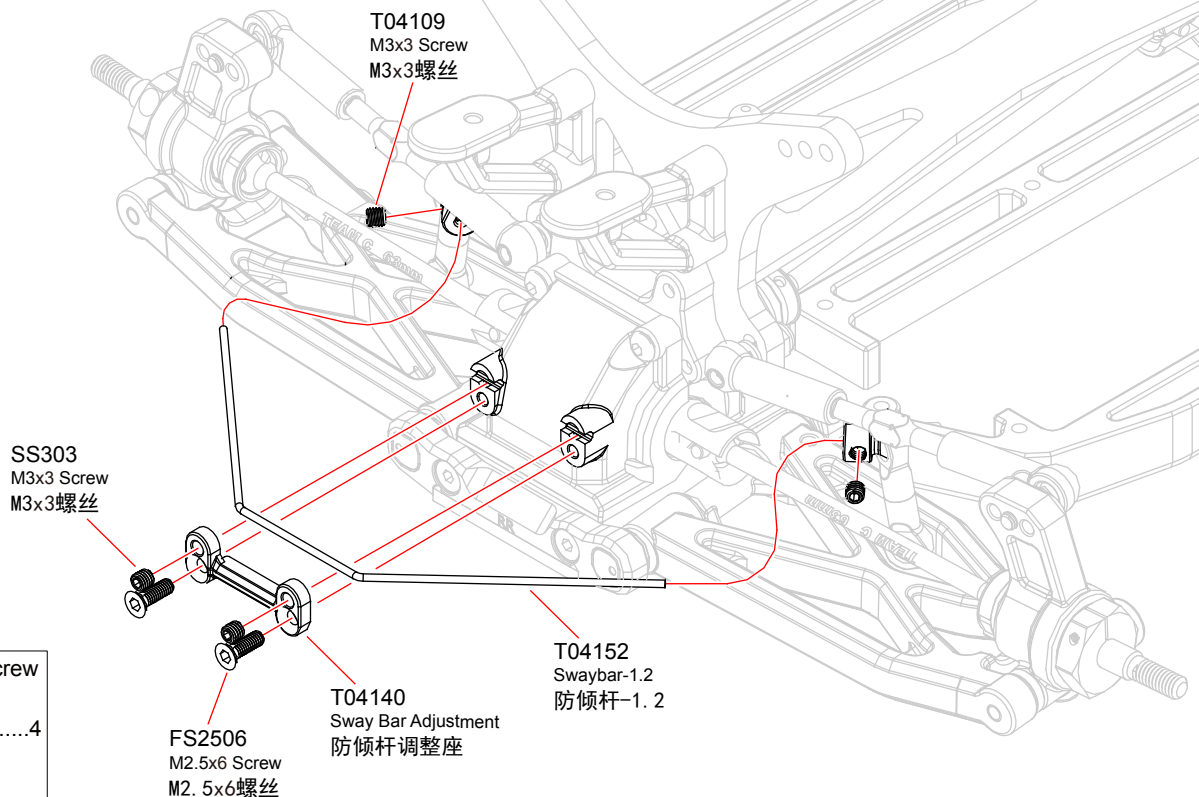

SS303/T04109 M3x3 Screw
M3x3螺丝


FS2506 M2.5x6 Screw
M2.5x6螺丝

.....4

.....2

32 Shock Absorber 避震器

Bag-E

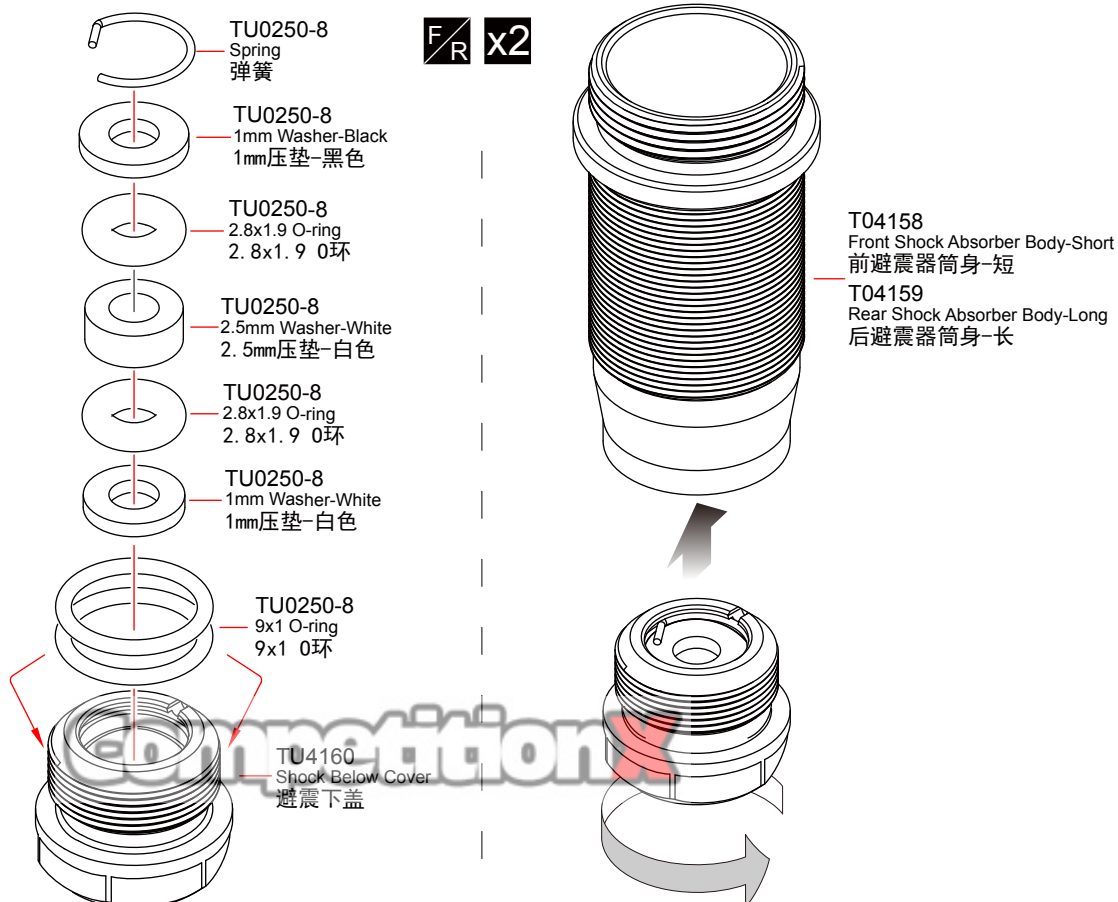

TU0250-8 Spring
弹簧

.....4

TU0250-8 1mm Washer-Black
1mm压垫-黑色

.....4

TU0250-8 1mm Washer-White
1mm压垫-白色

.....4

TU0250-8 2.5mm Washer-White
2.5mm压垫-白色

.....4

TU0250-8 2.8x1.9 O-ring
2.8x1.9 O环

.....8

TU0250-8 9x1 O-ring
9x1 O环

.....8


33 Shock Absorber 避震器

Bag-E


F/R **x2**

TU0250-1/TU0250-2 2.3 E-ring 2.3 E扣	8
TU0250-7 Front Piston-Black 前活塞-黑色	2
TU0250-7 Rear Piston-White 后活塞-白色	2
TU0250-8 12x1 O-ring 12x1 O环	4
T02187 5.8 Ball End 5.8球头座	4
T02062 5.8 Ball Stud 5.8球头	4

TU0250-7
Front Piston-Black
Rear Piston-White
前活塞-黑色
后活塞-白色

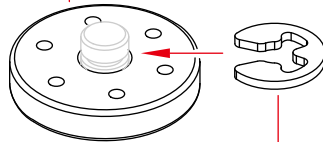


TU0250-1/TU0250-2
2.3 E-ring
2.3 E扣



TU0250-1/TU0250-2
2.3 E-ring
2.3 E扣

TU0250-1
Front Shock Absorber Shaft
前避震器轴

TU0250-2
Rear Shock Absorber Shaft
后避震器轴

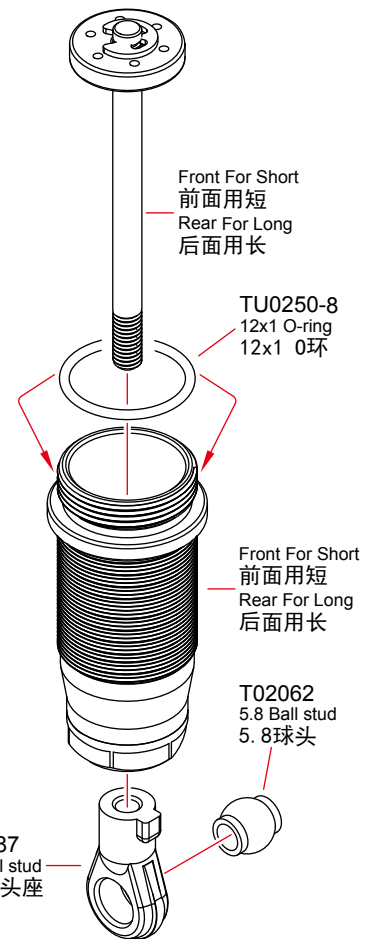

Front For Short
前面用短
Rear For Long
后面用长

TU0250-8
12x1 O-ring
12x1 O环

Front For Short
前面用短
Rear For Long
后面用长


T02062
5.8 Ball stud
5.8球头

T02187
5.8 Ball stud
5.8球头座


34 Shock Absorber 避震器

Bag-E


F/R **x2**

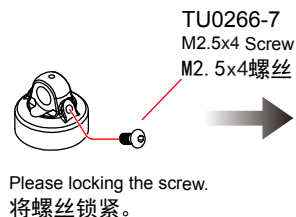

Please locking the screw.
将螺丝锁紧。

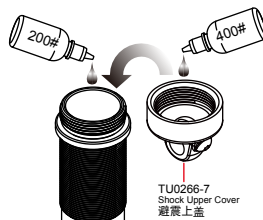


Front For Short
前面用短
Rear For Long
后面用长

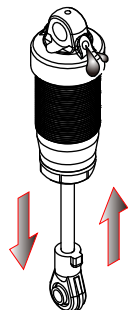

Please loosening the screw.
将螺丝松开。

TU0266-7
Below Spring Mount End
弹簧下座

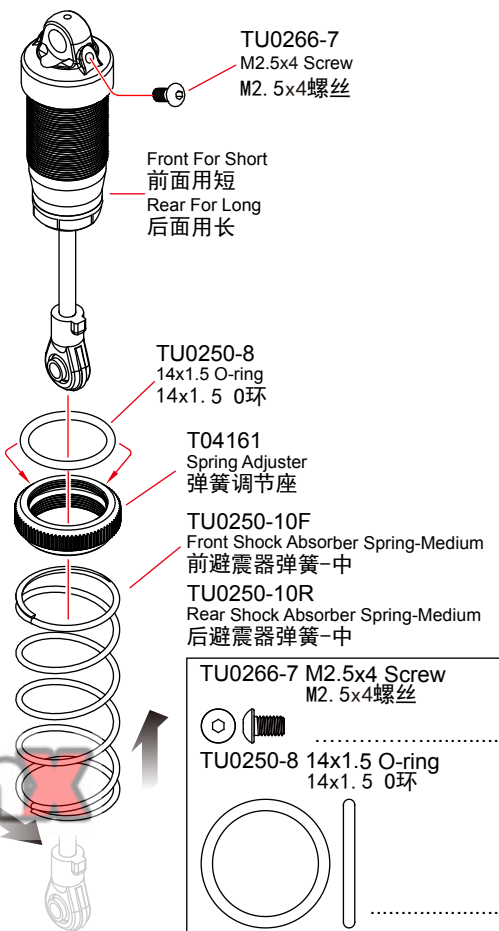

TU0266-7
M2.5x4 Screw
M2.5x4螺丝

Front For Short
前面用短
Rear For Long
后面用长

TU0250-8
14x1.5 O-ring
14x1.5 O环

T04161
Spring Adjuster
弹簧调节座

TU0250-10F
Front Shock Absorber Spring-Medium
前避震器弹簧-中

TU0250-10R
Rear Shock Absorber Spring-Medium
后避震器弹簧-中

TU0266-7 M2.5x4 Screw
M2.5x4螺丝

TU0250-8 14x1.5 O-ring
14x1.5 O环

35 Front Shock Absorber 前避震器


Bag-E x2

T04141
With Tooth Shock On The Ball
带牙避震上球珠

T02084
M3 Nylon Nut
M3尼龙螺母

BS312
M3x12 Screw
M3x12螺丝

T04041 With Tooth Shock On The Ball
带牙避震上球珠



2

T02084 M3 Nylon Nut
M3尼龙螺母



4

BS312 M3x12 Screw
M3x12螺丝




2

36 Rear Shock Absorber 后避震器

Bag-E x2

T04041 With Tooth Shock On The Ball
带牙避震上球珠



2

T02084 M3 Nylon Nut
M3尼龙螺母



4

BS312 M3x12 Screw
M3x12螺丝





2

T02084
M3 Nylon Nut
M3尼龙螺母

T04141
With Tooth Shock On The Ball
带牙避震上球珠


BS312
M3x12 Screw
M3x12螺丝

Competition

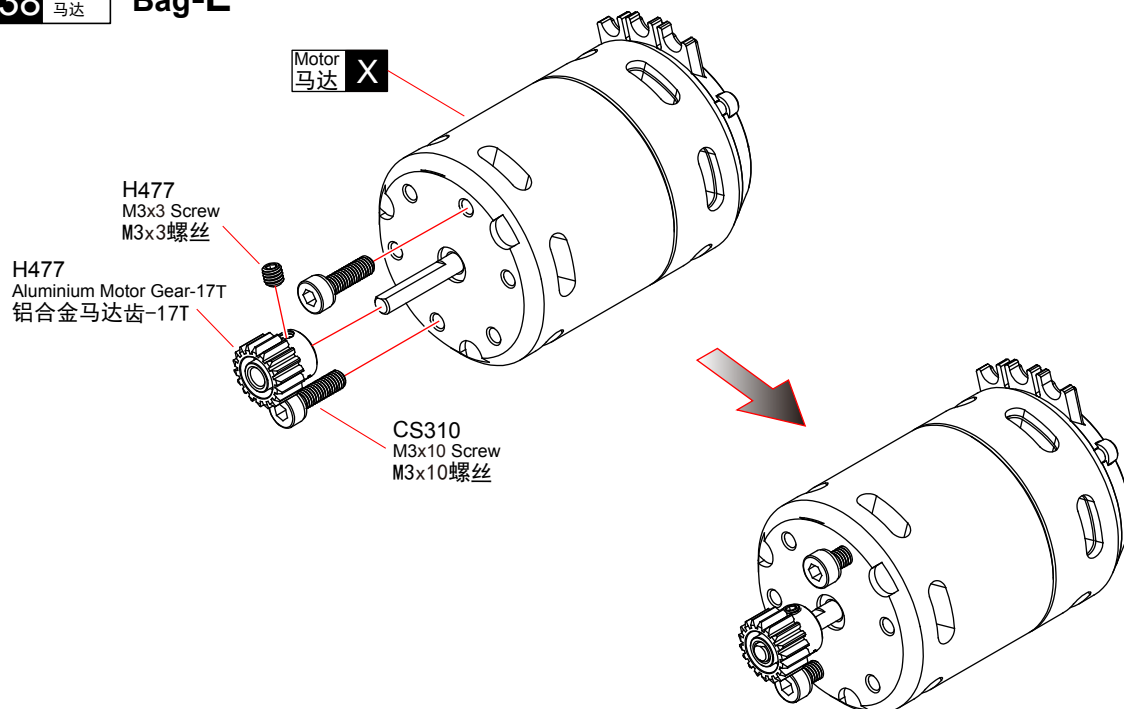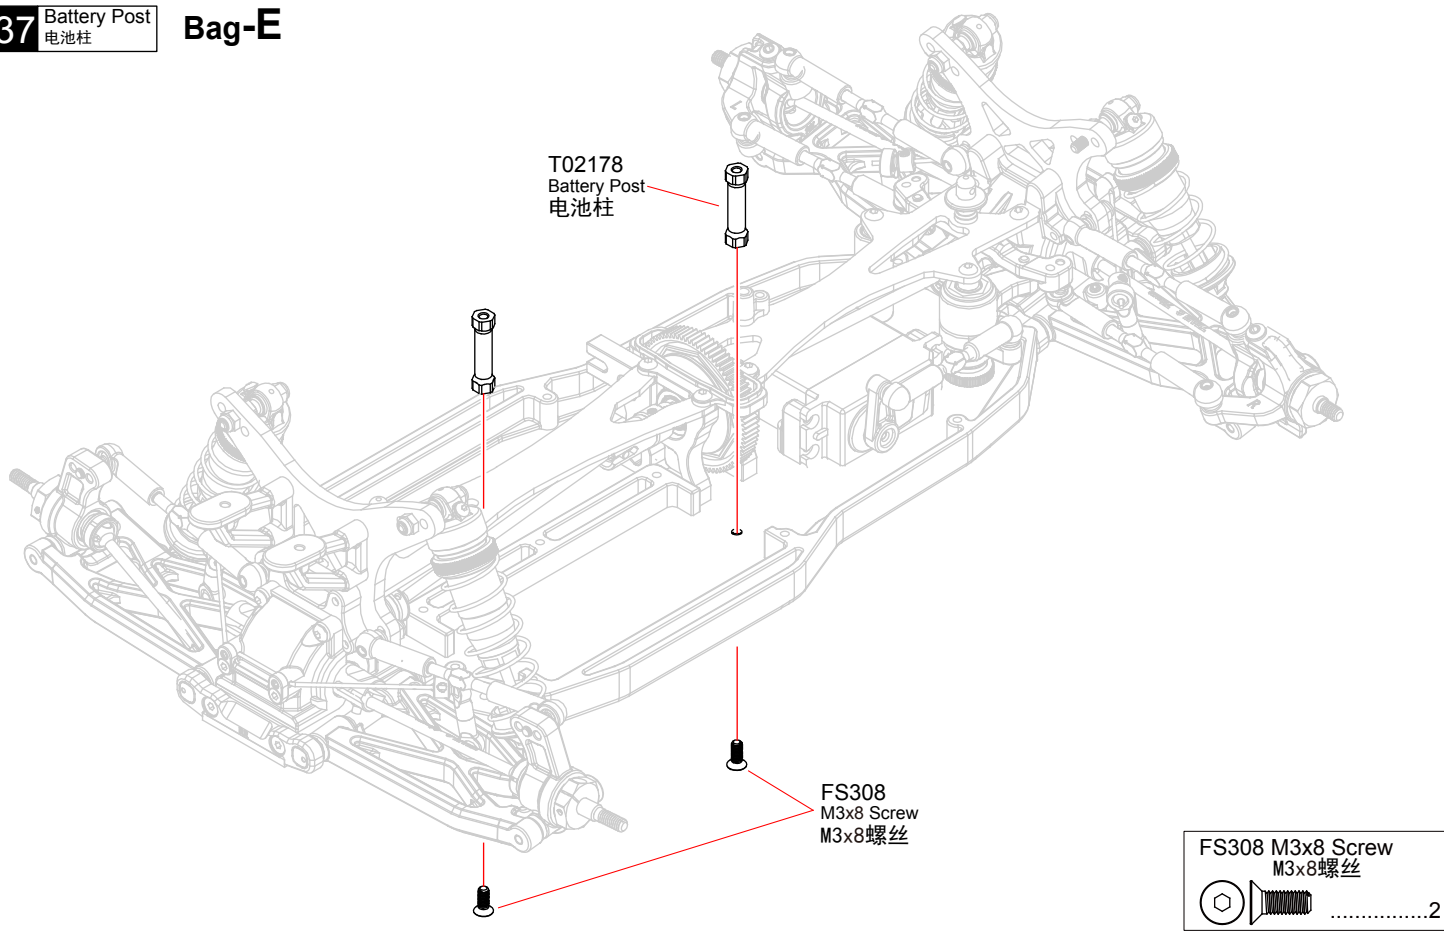



H477 M3x3 Screw M3x3 螺丝	1
CS310 M3x10 Screw M3x10 螺丝	2

Gear Ratio 齿 轮 比	12.5	11.7	11.1	10.5	10.0
Pinion Gear 马 达 齿	16T	17T	18T	19T	20T

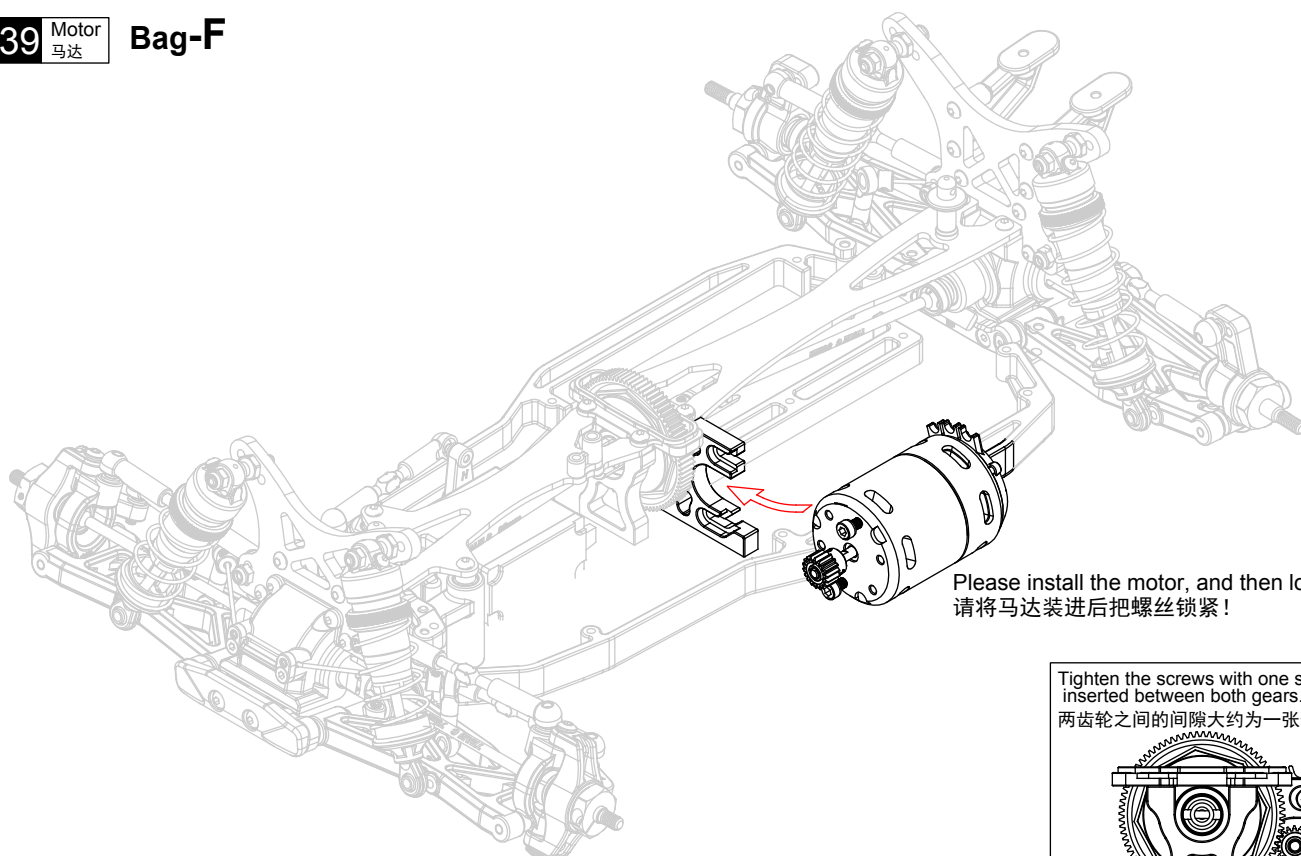


Please install the motor, and then lock the screw.
请将马达装进后把螺丝锁紧！

Tighten the screws with one sheet of paper
inserted between both gears.
两齿轮之间的间隙大约为一张普通纸的厚度。

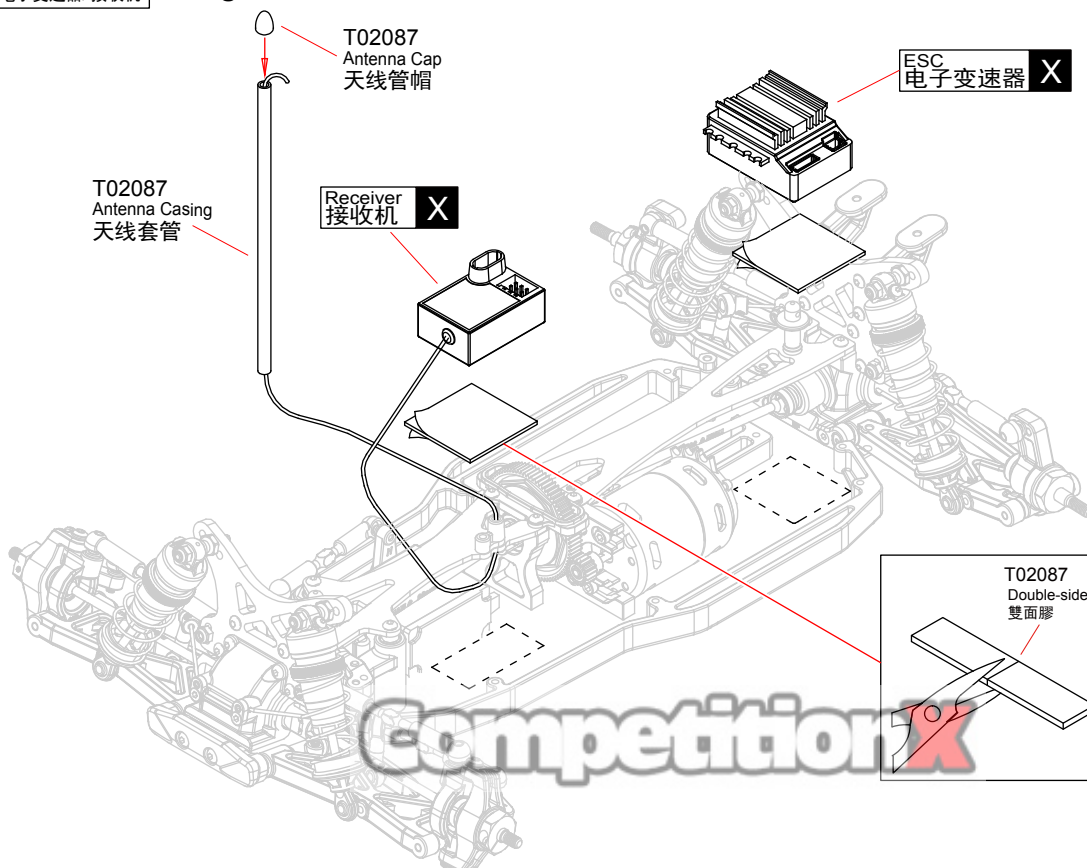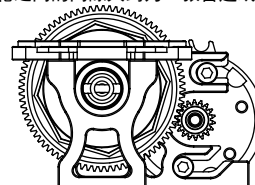

41 Battery 电池

Bag-F

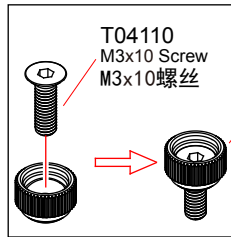

T04110
Adjustment nut
调车尺螺帽

T04144
Battery Holder
电池压板


Battery
电池 X

T04110 M3x10 Screw
M3x10螺丝
.....2

42 Shock Absorber 避震器

Bag-G < Front > x2

< Rear > x2

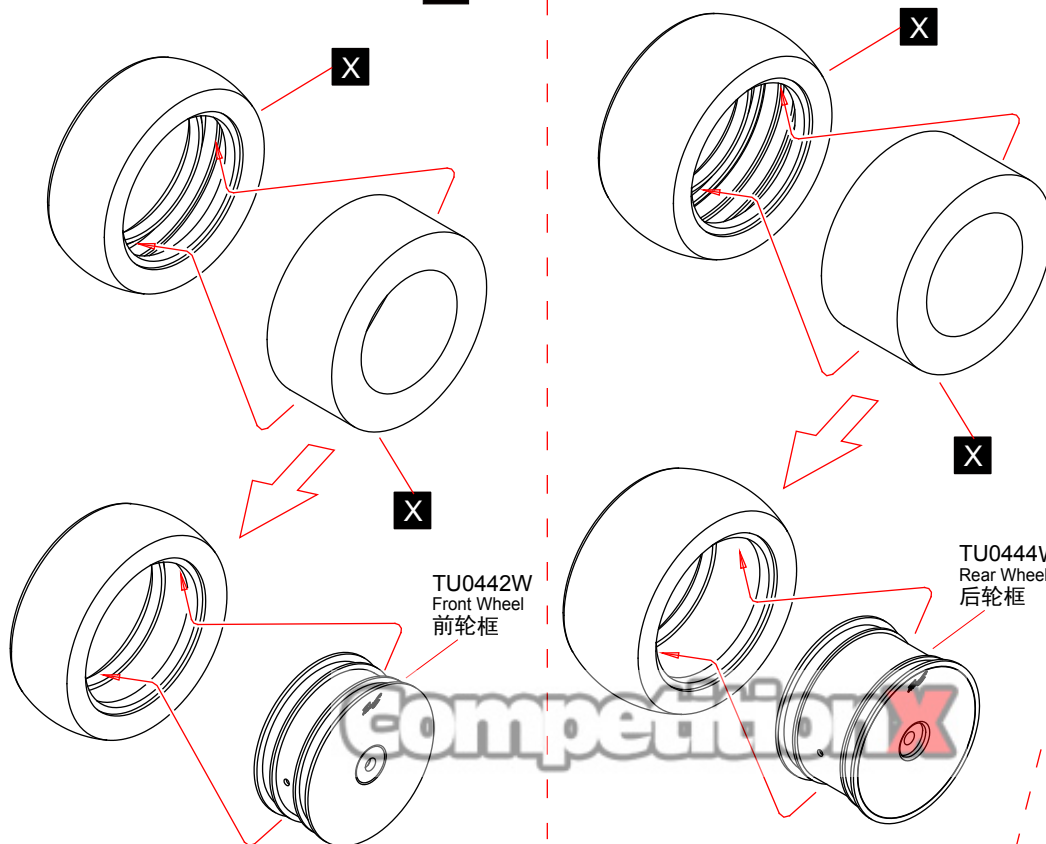

TU0442W
Front Wheel
前轮框


TU0444W
Rear Wheel
后轮框

F/R x2

After fitting wheels to tyres,
apply instant glue as shown
轮胎装好后如图打胶水



x4 Assemble as many times as specified
需組裝數量

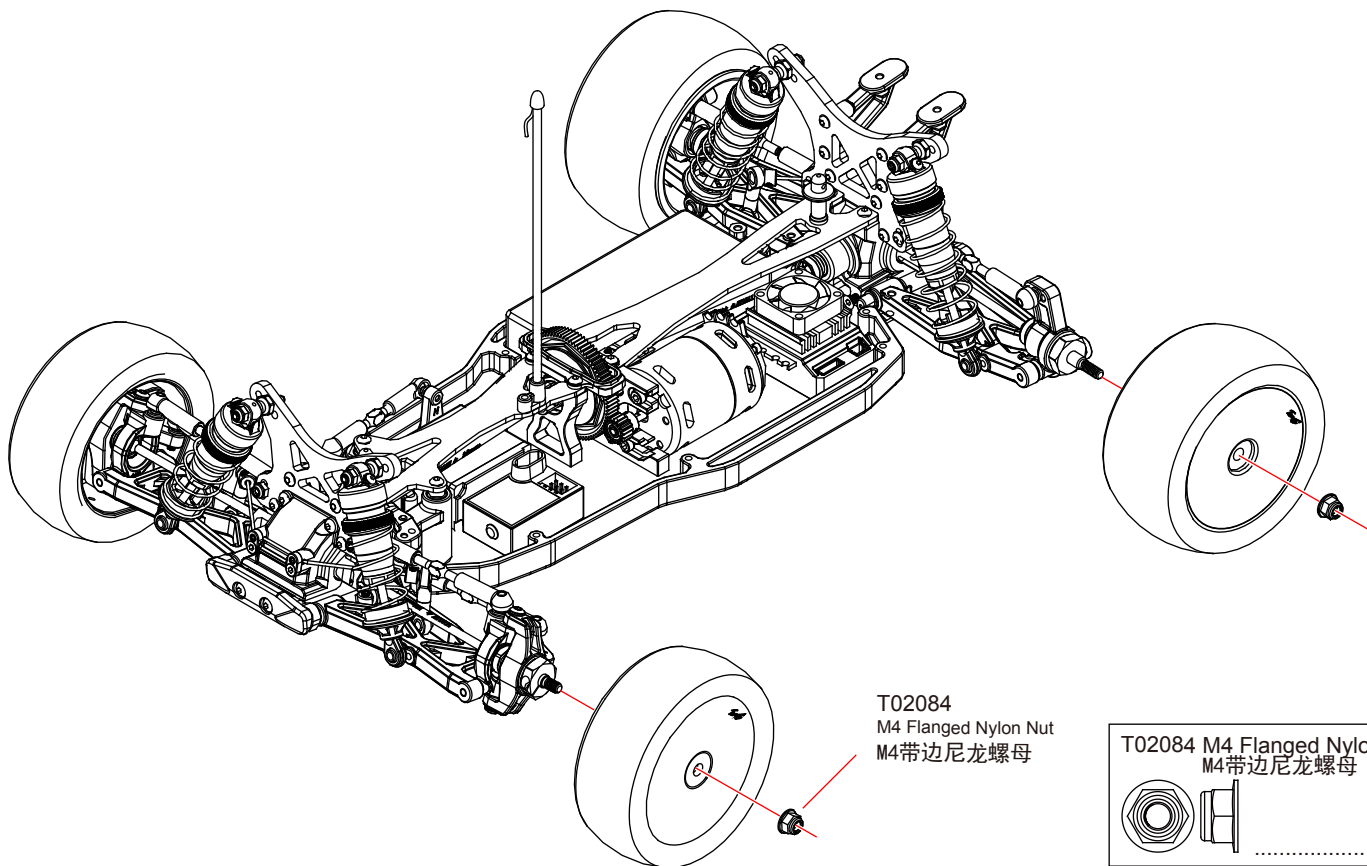


T02084
M4 Flanged Nylon Nut
M4带边尼龙螺母

T02084 M4 Flanged Nylon Nut
M4带边尼龙螺母




4

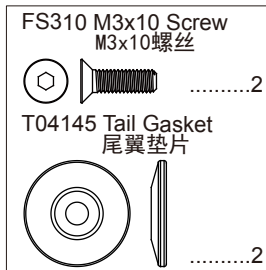




FS310
M3x10 Screw
M3x10螺丝

T04145
Tail Gasket
尾翼垫片

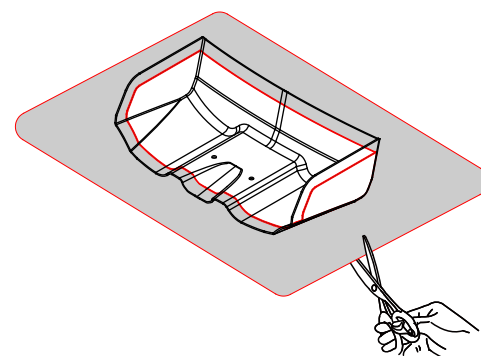


T04016
Wing-Lexan
尾翼


















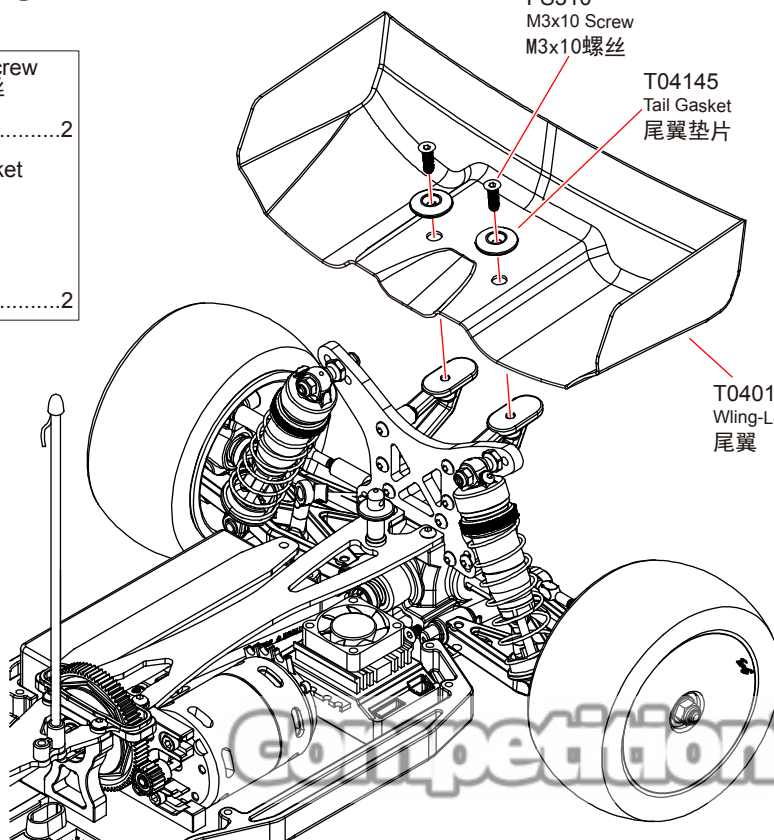


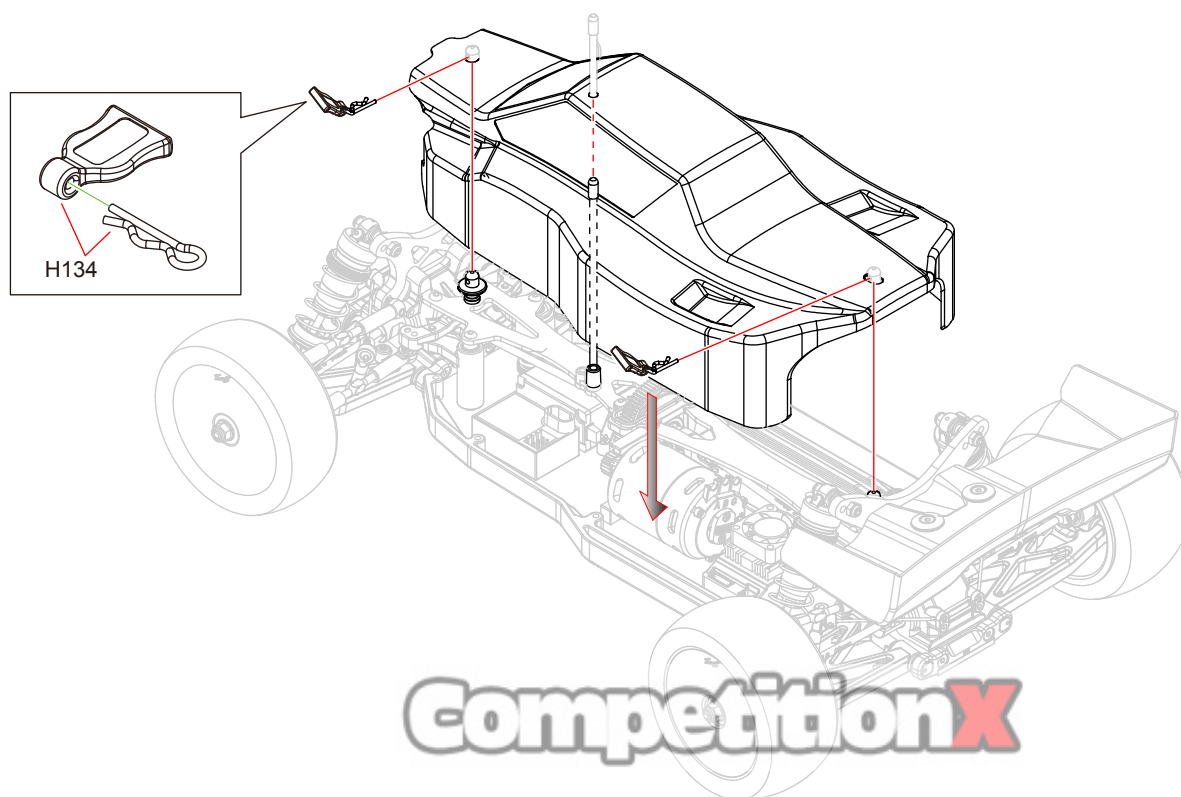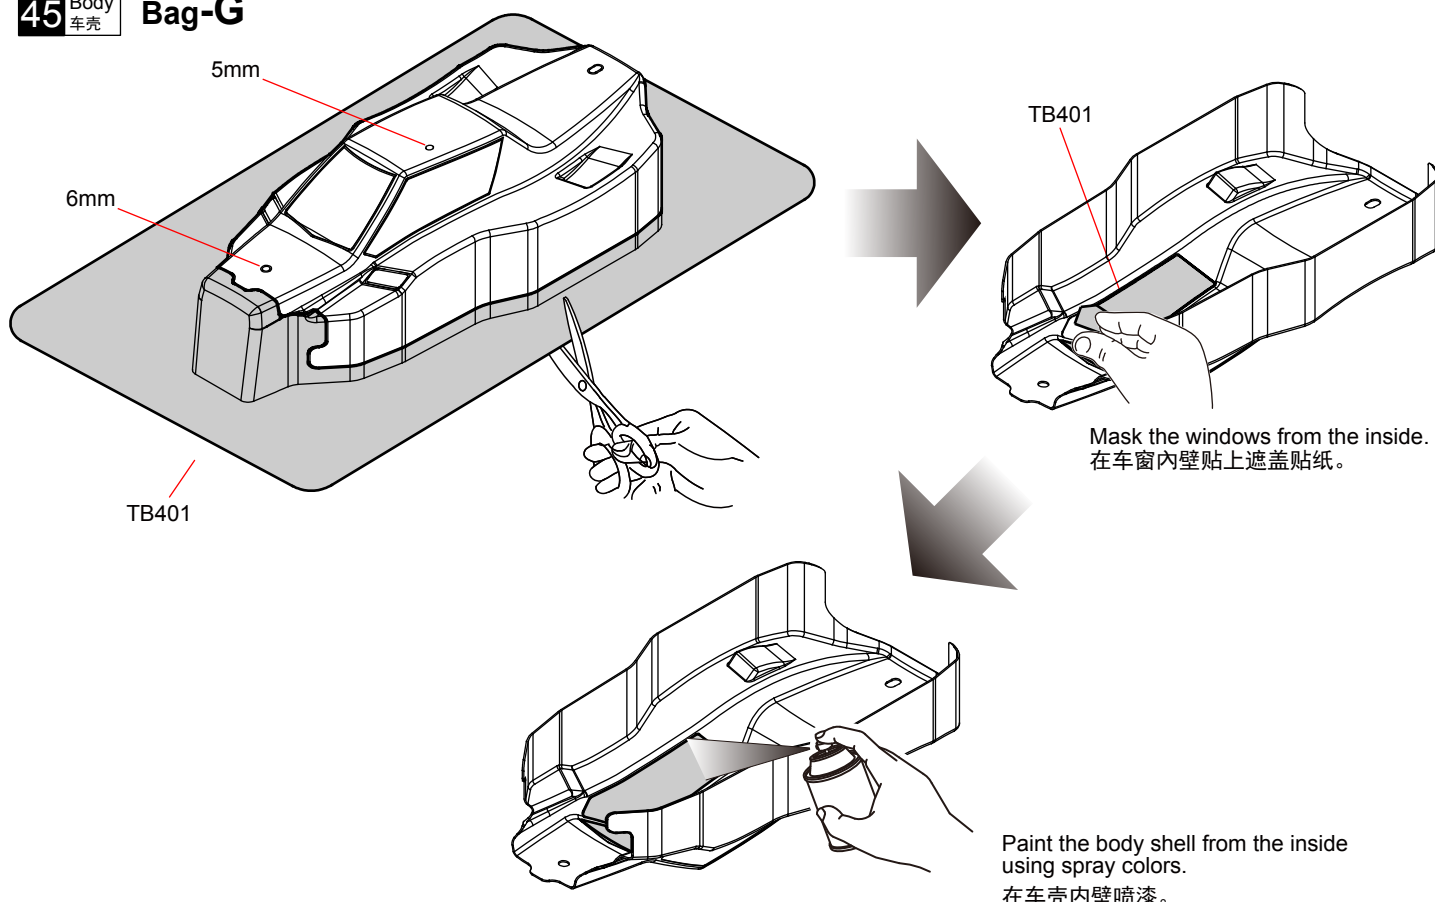






















爆炸圖

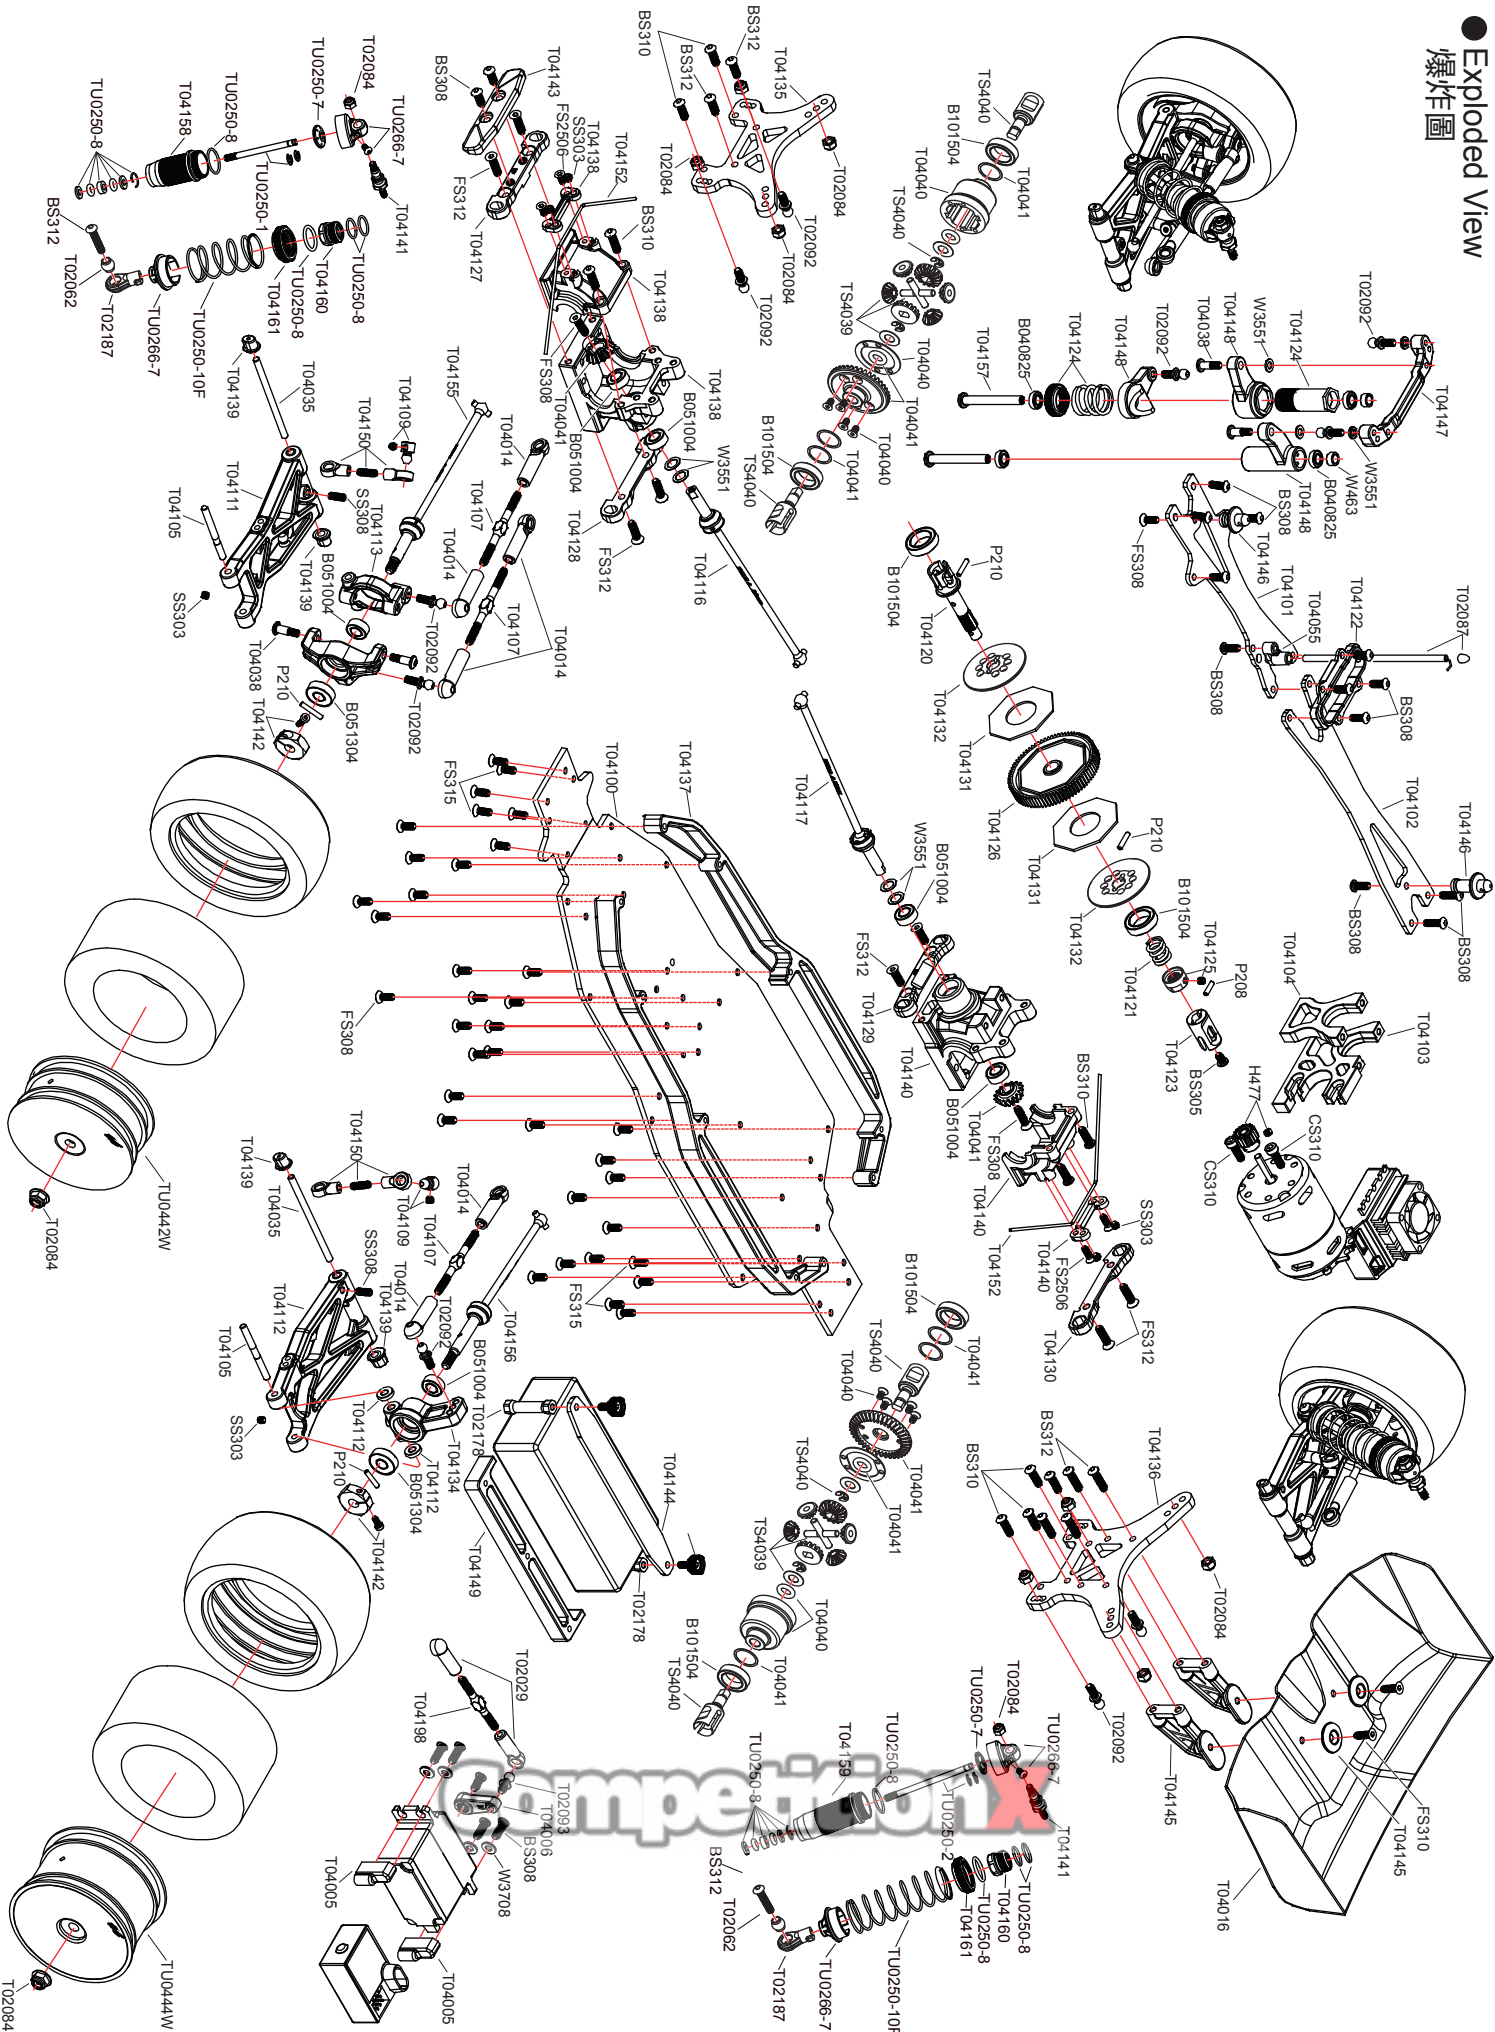























Parts list for TM4 off-road buggy - 1 TM4配件包-1

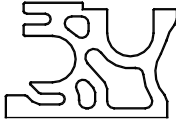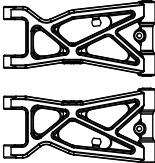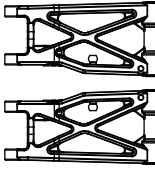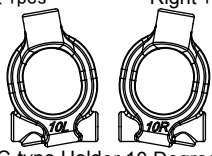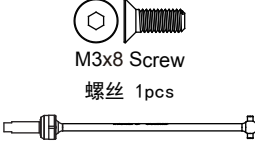T04100  Main Chassis 主底盘 1pcs	T04101  Front Top Deck 前二楼板 1pcs	T04102  Rear Top Deck 后二楼板 1pcs	T04103  Motor Mount 马达座 1pcs	T04104  Motor Mount-F 马达座-F 1pcs
T04105  3x32 Arm Pin 3x32摆臂轴 2pcs	T04106  3x33 Arm Pin 3x33摆臂轴 2pcs	T04107  3x45 Turnbuckle 3x45拉杆 2pcs	T04108  3x35 Turnbuckle 3x35拉杆 1pcs	T04109  M3x3 Screw 螺丝 2pcs Swaybar Ball Stud 防倾杆球头 2pcs
W463  4x6x3 Washer 垫片 2pcs	T04111  Left 1pcs Right 1pcs Front Lower Arm 前下摆臂	T04112  Left 1pcs Right 1pcs Rear Lower Arm 后下摆臂	 Wheelbase Washer 轴距垫片 4pcs	T04113  Left 1pcs Right 1pcs C-type Holder 10 Degree C型座10° 1pcs
TU0442W  Front Wheel 前轮框 2pcs	TU0444W  Rear Wheel 后轮框 2pcs	T04114  62mm Rear CVD Bone 62mm后CVD骨 2pcs	T04115  74mm Front CVD Bone 74mm前CVD骨 2pcs	T04116  M3x8 Screw 螺丝 1pcs 85mm Center CVD 85mm中CVD 1pcs
T04117  M3x8 Screw 螺丝 1pcs 95mm Center CVD 95mm中CVD 1pcs	T04118  Front CVD Axle 前CVD轴 2pcs	T04119  Rear CVD Axle 后CVD轴 2pcs	T04120  Torque Limit Shaft 扭限轴 1pcs	T04121  Torsion Spring Limited 扭限弹簧 1pcs
T04122  Difference On The Roof 中差上顶板 1pcs	T04123  Center Diff Connecting Cup 中差接杯 1pcs	T04124  Servo Saver Body 缓冲筒身 1pcs  Buffer Prop Adjusting Nut 缓冲支柱调整螺帽 1pcs	 Steering Buffer Spring 转向缓冲弹簧 1pcs	T04125  M3x3 Screw 螺丝 1pcs Twist The Limit Of Adjusting Ring 扭限调整环 1pcs
T04126  Spur Gear-80T 齿轮-80T 1pcs	T04127  Arm Mount-FF 摆臂固定座-FF 1pcs	T04128  Arm Mount-FR 摆臂固定座-FR 1pcs	T04129  Arm Mount-RF 摆臂固定座-RF 1pcs	T04130  Arm Mount-RR 摆臂固定座-RR 1pcs








Parts list for TM4 off-road buggy - 2 TM4配件包-2

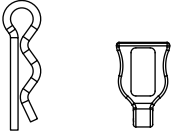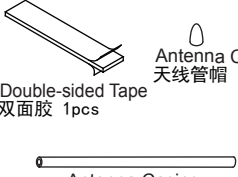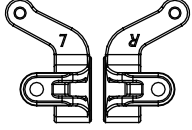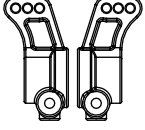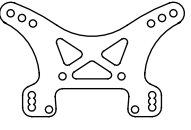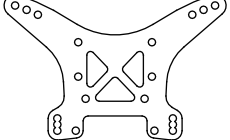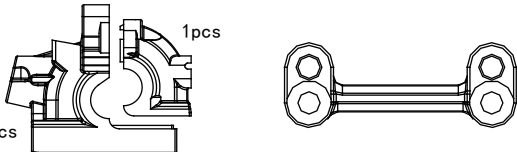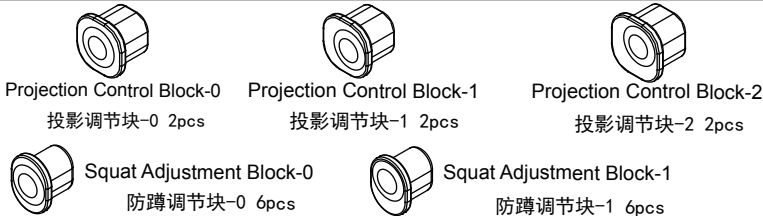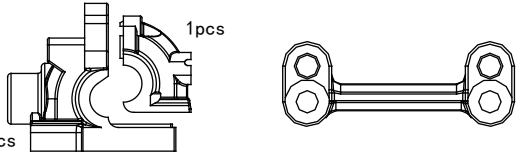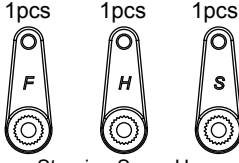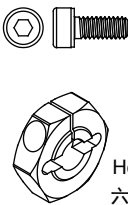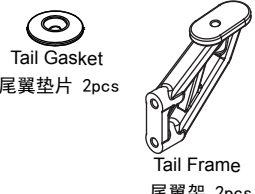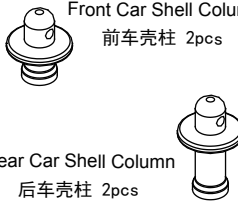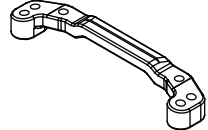H134  Small Clip 小号插销 6pcs Small Clip Holder 小号插销固定座 6pcs	T04131  Anise Torsion Limit Friction Plate 八角扭限摩擦片 2pcs	T04132  Torque Limit Set-A 扭限盘-A 1pcs Torque Limit Set-B 扭限盘-B 1pcs	T02087  Double-sided Tape 双面胶 1pcs Antenna Cap 天线管帽 1pcs Antenna Casing 天线套管 1pcs	W3551  3x5.5x1 Washer 垫片 6pcs
T04133  Left 1pcs Right 1pcs Steering Arm 转向臂	T04134  Left 1pcs Right 1pcs Rear Hub 后轮座	T04135  Front Shock Tower 前避震器架 1pcs	T04136  Rear Shock Tower 后避震器架 1pcs	T04137  Left 1pcs Right 1pcs Side Panel 侧板
T04138  1pcs 1pcs Front Gear-box 前齿轮箱 Sway Bar Adjustment 防倾杆调整座 1pcs	T04139  Projection Control Block-0 投影调节块-0 2pcs Projection Control Block-1 投影调节块-1 2pcs Projection Control Block-2 投影调节块-2 2pcs Squat Adjustment Block-0 防蹲调节块-0 6pcs Squat Adjustment Block-1 防蹲调节块-1 6pcs			
T04140  1pcs 1pcs Rear Gear-box 后齿轮箱 Sway Bar Adjustment 防倾杆调整座 1pcs	T04006  1pcs 1pcs 1pcs Steering Servo Horn 转向伺服臂 1pcs	T04141  With Tooth Shock On The Ball 带牙避震器上球珠 4pcs	T04142  2x5 Screw 螺丝 4pcs Hex Mount-14mm 六角座-14mm 4pcs	
T04143  Anti-collision Plate 防撞板 1pcs	T04144  Battery Holder 电池压板 1pcs	T04145  Tail Gasket 尾翼垫片 2pcs Tail Frame 尾翼架 2pcs	T04146  Front Car Shell Column 前车壳柱 2pcs Rear Car Shell Column 后车壳柱 2pcs	T04147  Buffer Connection Plate 缓冲连接板 1pcs
T04148  Servo Saver Top 缓冲座上 1pcs Servo Saver Bottom 缓冲座下 1pcs Servo Saver Left 缓冲座左 1pcs	T04149  Central Reinforcing Bar 中央补强条 1pcs	T04014  4.8mm Ball End-Long 4.8mm球头座-长 6pcs	T04150  M3x10 Screw 螺丝 4pcs 4.8mm Ball End-Short 4.8mm球头座-短 8pcs	
T02029  4.8mm Ball End 4.8mm球头座 6pcs	T04151  1.1 1pcs Swaybar 防倾杆 2pcs	T04152  1.2 1pcs Swaybar 防倾杆 2pcs	T04153  1.3 1pcs Swaybar 防倾杆 2pcs	T04154  1.4 1pcs Swaybar 防倾杆 2pcs

Parts list for TM4 off-road buggy - 3 TM4配件包-3

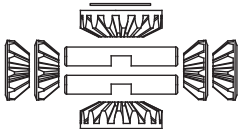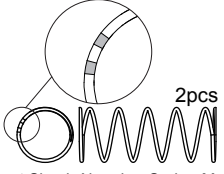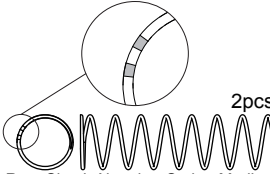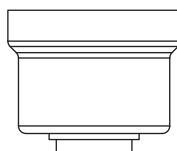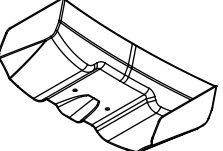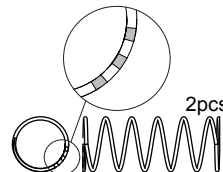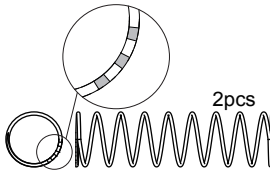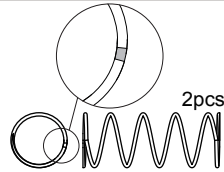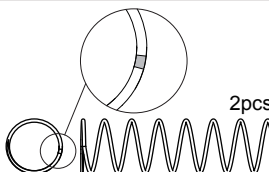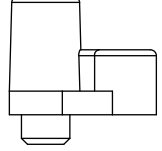T04155  74mm Front CVD 74mm前CVD 2pcs	T04156  62mm Rear CVD 62mm后CVD 2pcs	TS4039  Diff Gear Set 差速齿轮组	T02084  M4 Flanged Nylon Nut 带边尼龙螺母 6pcs  M3 Nylon Nut 尼龙螺母 6pcs	TS4040  3.0 E-ring 3.0 E扣 2pcs  Diff Connecting Cup 差速接杯 2pcs
TU0250-1  2.3 E-ring 2.3 E扣 4pcs  Front Shock Absorber Shaft 前避震器轴 2pcs	TU0250-2  2.3 E-ring 2.3 E扣 4pcs  Rear Shock Absorber Shaft 后避震器轴 2pcs	T04158  Front Shock Absorber Body 前避震器筒身 2pcs	B051004  5x10x4 Ball Bearing 轴承 6pcs	B101504  10x15x4 Ball Bearing 轴承 6pcs
T04159  Rear Shock Absorber Body 后避震器筒身 2pcs	TU0250-5  Below Spring Mount End 弹簧下座 4pcs	TU0250-8  1mm Washer-White 1mm压垫-白色 4pcs  1mm Washer-Black 1mm压垫-黑色 4pcs  2.5mm Washer-White 2.5mm压垫-白色 4pcs  Spring 弹簧 4pcs  9x1 O-Ring 9x1 O环 4pcs  2.8x1.9 O-Ring 2.8x1.9 O环 4pcs  12x1 O-Ring 12x1 O环 4pcs  14x1.5 O-Ring 14x1.5 O环 4pcs		
TU0250-7  Front Piston-Black 前活塞-黑色 2pcs  Rear Piston-White 后活塞-白色 2pcs	TU0250-10F  Front Shock Absorber Spring-Medium 前避震器弹簧-中 2pcs	TU0250-10R  Rear Shock Absorber Spring-Medium 后避震器弹簧-中 2pcs	T04160  Shock Below Cover 避震下盖 4pcs	T04161  Spring Adjuster 弹簧调节座 4pcs
T04040  Diff Housing 差速壳 1pcs  4.8x1.6 O-ring 4.8x1.6 O环 1pcs  10x12x0.2 Washer 10x12x0.2垫片 2pcs  M2.5x6 Screw M2.5x6螺丝 4pcs  Diff Pads 差速垫片 1pcs		T04041  16T Gear 16T齿轮 1pcs  40T Gear 40T齿轮 1pcs  10x12x0.2 Washer 10x12x0.2垫片 2pcs  4.8x1.6 O-ring 4.8x1.6 O环 1pcs		T04016  Wing-Lexan 尾翼 1pcs
TU0262-F  Front Shock Absorber Spring-Soft 前避震器弹簧-软 2pcs	TU0262-R  Rear Shock Absorber Spring-Soft 后避震器弹簧-软 2pcs	TU0260-F  Front Shock Absorber Spring-Hard 前避震器弹簧-硬 2pcs	TU0260-R  Rear Shock Absorber Spring-Hard 后避震器弹簧-硬 2pcs	T02187  5.8 Ball End 球头座 4pcs
H477  Aluminium Motor Gear-17T 铝合金马达齿-17T 1pcs  3x3 Screw 1pcs	T02092  Ball Stud Sponge 球头海绵 2pcs  Ball Stud-Long 球头-长 2pcs	T04055  Antenna Pipe Mount 天线管座 1pcs	T04005 2pcs  1mm Spacer 2pcs  2mm Spacer 2pcs Servo Mount 伺服机座	T02178  Battery Post 電池柱 2pcs

Parts list for TM4 off-road buggy - 4 TM4配件包-4

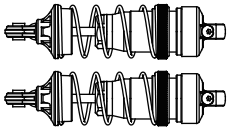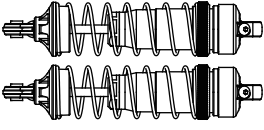TU0266-7  Below Spring Mount end-Plastic 弹簧下座-尼龙 4pcs  Shock Absorber Top cover-Plastic 避震器上盖-尼龙 4pcs  M2.5x4 Screw M2.5x4螺丝 4pcs	T04022  Spring Buckle 弹簧扣 1pcs	T01057  2x9.8 pin 钢针 4pcs  CVD Shaft CVD轴 4pcs	T04157  Servo Saver Post 缓冲柱 2pcs	T04038  M3 Screw M3螺丝 6pcs
BS305  M3x5 Screw M3x5螺丝 10pcs	BS308  M3x8 Screw M3x8螺丝 10pcs	BS310  M3x10 Screw M3x10螺丝 10pcs	FS308  M3x8 Screw M3x8螺丝 10pcs	FS310  M3x10 Screw M3x10螺丝 10pcs
FS312  M3x12 Screw M3x12螺丝 10pcs	FS315  M3x15 Screw M3x15螺丝 10pcs	CS310  M3x10 Screw M3x10螺丝 10pcs	SS303  M3x3 Screw M3x3螺丝 10pcs	SS308  M3x8 Screw M3x8螺丝 10pcs
P210  2x9.8 Pin 2x9.8钢针 6pcs	P212  2x11.8 Pin 2x11.8钢针 6pcs	P208  2x7.8 Pin 2x7.8钢针 6pcs	B051304  5x13x4 Ball Bearing 5x13x4轴承 6pcs	B040803  4x8x3 Ball Bearing 4x8x3轴承 6pcs
W5802  5x8x0.2 Washer 5x8x0.2垫片 6pcs	T04110  Adjustment nut 调车尺螺帽 2pcs  M3x10 Screw M3x10螺丝 2pcs	BS312  M3x12 Screw M3x12螺丝 10pcs	FS2506  M2.5x6 Screw M2.5x6螺丝 10pcs	T04035  3x51 Arm Pin 3x51摆臂轴 2pcs
T02093  Ball Stud Sponge 球头海绵 5pcs  Ball Stud-Short 球头-短 5pcs	W3708  3x7x0.8 Washer 3x7x0.8垫片 10pcs	T02062  5.8 Ball Stud 球头 4pcs	T04162  Front Shock Absorber 前避震器	T04163  Rear Shock Absorber 后避震器

TM4

SETUP SHEET for the TeamC TM4

Driver _____

Track / City _____

Event _____ Date ____ / ____ / ____

Conditions

☐ Smooth

☐ Bumpy

☐ Low traction

☐ Med traction

☐ High traction

☐ Sandy

☐ Soft dirt

☐ Grass

☐ Hard soil

☐ Clay

☐ Wet


☐ Dry

☐ Dusty

☐ Other

Front Suspension


Shock Mounting&Camber link

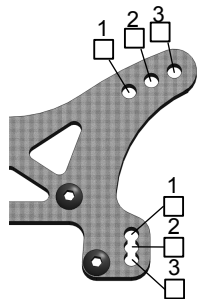

Anti-roll bar: ☐ _____ mm


Camber _____ °

Washers
_____ mm

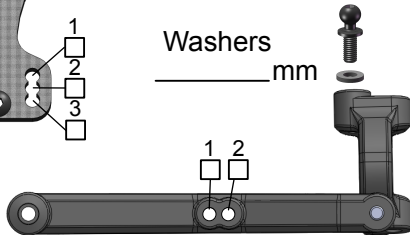


Ride height _____


Toe-in (+)/Out (-) _____ °
Bump Steep Spacer _____

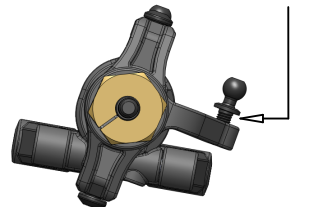

Washers _____



Front Shocks

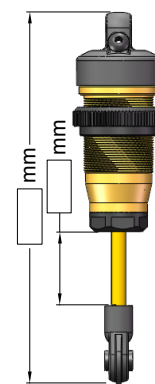

Spring(color)

☐ Black


☐ _____

Oil _____ wt

Piston # _____


Rear Suspension

Shock Mounting&Camber link

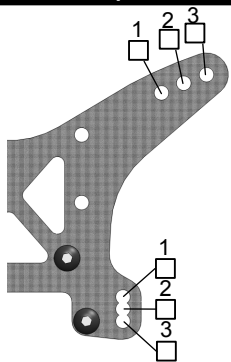


Anti-roll bar: ☐ _____ mm

Camber _____ °

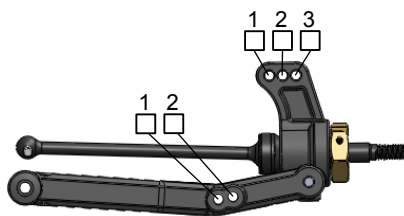

Ride height _____

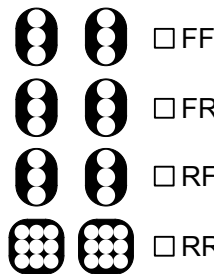


Wheelbase


☐ Long

☐ Medium

☐ Short

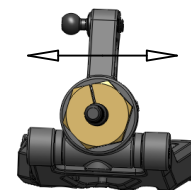

Rear Shocks

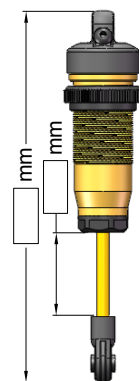

Spring(color)

☐ Black

☐ _____

Oil _____ wt

Piston # _____

Front Diff

Brand _____

Oil wt _____

Rear Diff

Brand _____

Oil wt _____

Front Tires&Wheels

Front Tires _____

Inserts _____ Wheels _____

Rear Tires&Wheels

Rear Tires _____

Inserts _____ Wheels _____

Batteries

Servo _____

Esc _____

Batteries _____

Motor

Motor _____

Pinion/Spur _____ / _____

Other

Wing _____

Wing Angle ☐ 4° ☐ 10°

Team
Team
www.teamcracing.net

CompetitionX